

BRV-INR6

BRV Option Switch Settings: 1(ICT-BC/MDB/JPSTD Dummy/MDB Dummy)

Supported bill Rs 10, 20, 50, 100, 200, 500 6bills.

BRV dip-switch settings and functions:

FUNCTION	SW1	SW2	SW3	SW4	SW5	SW6	SW7	SW8	SW1	SW2	SW3	SW4
Reject Rs 10 & 20	ON											
Accept Rs 10 & 20	OFF											
Reject Rs 50		ON										
Accept Rs 50		OFF										
Reject Rs 100			ON									
Accept Rs 100			OFF									
Reject Rs 200				ON								
Accept Rs 200				OFF								
Reject Rs 500					ON							
Accept Rs 500					OFF							
Normal						OFF	OFF					
Load Banknote to Recycle						ON	OFF					
Load Banknote to Stacker						OFF	ON					
Unload Banknote to Stacker						ON	ON					
Medium Security (Note.4)								ON				
High Security								OFF				
MDB Mode	MDB Dummy Mode	SW1	SW2	SW3	SW4	JPSTD Dummy Mode						
Reserved	Reserved	ON				★ 255 Bank Note Limitation Per Transaction	ON	ON	ON			
Reserved	Reserved	OFF				1 Bank Note Limitation Per Transaction	OFF	OFF	OFF			
Reserved	Reserved		ON			2 Bank Note Limitation Per Transaction	ON	OFF	OFF			
Reserved	Reserved		OFF			3 Bank Note Limitation Per Transaction	OFF	ON	OFF			
Reserved	Reserved			ON		4 Bank Note Limitation Per Transaction	ON	ON	OFF			
Reserved	Reserved			OFF		5 Bank Note Limitation Per Transaction	OFF	OFF	ON			
Reserved	Reserved				ON	6 Bank Note Limitation Per Transaction	ON	OFF	ON			
Reserved	Reserved				OFF	7 Bank Note Limitation Per Transaction	OFF	ON	ON			
Virtual MDB (Note.5) Recycler Function	No Refund After the Deal				ON	No Refund After the Deal				ON		
Standard MDB Recycler Function	★ Refund After the Deal				OFF	★ Refund After the Deal				OFF		

★ Manufacture setting

Note : (1) After setting dip switch of the credit pulses,you should reset the bill acceptor again.

(2) Please reset the bill acceptor after set the dip switch.

(3) Calibrate card.

(4) High acceptance mode will increasing accepting rate, however, it will reduce the security level of Bill Acceptor.

(5) Recycled Banknote represents virtual MDB coin type.

(6) Virtual Coin Changer : Scaling Factor = 1, Decimal Point Position= 0.

BRV-INR6(ICT-BC/MDB/JPSTD Dummy/MDB Dummy)

Interface Settings: 2(ICT-BC)

INTERFACE	SW5	SW6	SW7	SW8
Reserved	ON			
Reserved	OFF			
Connect with MDB Connector		ON		
Connect with RS232 Connector		OFF		
MDB Mode			OFF	OFF
JPSTD Dummy Mode			OFF	ON
MDB Dummy Mode			ON	OFF
ICT-BC Mode			ON	ON

★ Manufacture setting

Interface Settings: 2(JPSTD Dummy)

INTERFACE	SW5	SW6	SW7	SW8
Escrow (JPSTD Dummy Mode)	ON			
No Escrow (JPSTD Dummy Mode)	OFF			
No Bill Acceptor Error Code		ON		
Bill Acceptor Error Code		OFF		
MDB Mode			OFF	OFF
JPSTD Dummy Mode			OFF	ON
MDB Dummy Mode			ON	OFF
ICT-BC Mode			ON	ON

★ Manufacture setting

Interface Settings: 2(MDB)

INTERFACE	SW5	SW6	SW7	SW8
Scaling Factor (SF)= 100 Decimal Point Position (DPP)= 2	ON			
Scaling Factor (SF)= 1 Decimal Point Position (DPP)= 0	OFF			
Reserved		ON		
Reserved		OFF		
MDB Mode			OFF	OFF
JPSTD Dummy Mode			OFF	ON
MDB Dummy Mode	(Note.6)		ON	OFF
ICT-BC Mode			ON	ON

★ Manufacture setting

Currency Assign Data

Interface Bill value	JPSTD Dummy	ICT-BC	MDB (Dummy)	Recycler banknote inventory	
BV1	Rs 10	Rs 10	Rs 10	Rs 10	35 pcs
BV2	Rs 20	Rs 20	Rs 20	Rs 20	35 pcs
BV3	Rs 50	Rs 50	Rs 50	Rs 50	35 pcs
BV4	Rs 100	Rs 100	Rs 100	Rs 100	35 pcs
BV5	Rs 200	Rs 200	Rs 200	Rs 200	35 pcs
BV6	Rs 500	Rs 500	Rs 500	Rs 500	30 pcs