



ROL7

L83 DIP SWITCHES SETTING : 1

Supported bill Lei 1(05), 5(05), 10(05), 50(05), 100(05),
200(06), 500(05) 7bills.

FUNCTION	SW1	SW2	SW3	SW4	SW5	SW6	SW7	SW8	SW9	SW10
★ 1 Pulse / Lei 1	OFF	OFF	OFF							
2 Pulse / Lei 1	OFF	OFF	ON							
3 Pulse / Lei 1	OFF	ON	OFF							
4 Pulse / Lei 1	OFF	ON	ON							
5 Pulse / Lei 1	ON	OFF	OFF							
10 Pulse / Lei 1	ON	OFF	ON							
20 Pulse / Lei 1	ON	ON	OFF							
100 Pulse / Lei 1	ON	ON	ON							
Fast output Pulse <small>Lo= 50ms Hi=100ms</small>				ON						
★ Slow output Pulse <small>Lo= 50ms Hi=300ms</small>				OFF						
Inhibit level Active Low					ON					
★ Inhibit level Active High					OFF					
★ Accept Lei 1 & 5						ON				
Reject Lei 1 & 5						OFF				
★ Accept Lei 10 & 50							ON			
Reject Lei 10 & 50							OFF			
★ Accept Lei 100								ON		
Reject Lei 100								OFF		
★ Accept Lei 200									ON	
Reject Lei 200									OFF	
★ Accept Lei 500										ON
Reject Lei 500										OFF

DIP SWITCHES SETTING : 2

FUNCTION	SW1	SW2	SW3	SW4
★ Pulse Normal High	ON			
Pulse Normal Low	OFF			
ccTalk Interface		OFF	OFF	
ccTalk Parameters Restore Switch <small>Please see Note (3) for detail</small>		OFF	ON	
Pulse Mode		ON	OFF	
SMILEY Mode		ON	ON	
Reserved				ON
				OFF

★ Manufacture setting

Note: (1) Please reset the bill acceptor after set the dip switch.

(2) Dip switches 1 to 5 are only used for pulse protocol.

(3) Put this switch to on and reset power will restore the CCTalk address to its default value of 40 and the encryption key to its default value of 123456.