

A7/V7 PLUS-EUR3

A7/V7 PLUS Option Switch Settings: 1

Supported bill Euro 5, 10, 20 3bills.

A7/V7 PLUS dip-switch settings and functions:

FUNCTION	SW1	SW2	SW3	SW4	SW5	SW6	SW7	SW8	SW1	SW2	SW3	SW4
Reject Euro 5	ON											
Accept Euro 5	OFF											
Reject Euro 10		ON										
Accept Euro 10		OFF										
Reject Euro 20			ON									
Accept Euro 20			OFF									
Reserved				ON								
Reserved				OFF								
Reserved					ON							
Reserved					OFF							
Ignore Sensor Problem(Note 1)						ON						
Acknowledge Sensor Problem (Note 2)						OFF						
Harness Disable							ON					
Harness Enable							OFF					
Inhibit Active High								ON				
Inhibit Active Low								OFF				
1 pulse / Euro 5									OFF	OFF		
5 pulse / Euro 5									ON	OFF		
10 pulse / Euro 5									OFF	ON		
20 pulse / Euro 5									ON	ON		
Pulse Speed	50ms on / 50ms off										OFF	OFF
	60ms on / 300ms off										ON	OFF
	30ms on / 50ms off										OFF	ON
	150ms on / 150ms off										ON	ON

◆ Factory configuration has all switches in the OFF position.

Note : (1) Reset the bill acceptor after setting the dip switch.

(2) SW7 and SW8 of the 8-switch DIP and the 4-switch DIP are for pulse protocol only.

◆ (Note 1) Sensor 3 problem occurred ==>> BA will be still in working order.

(The face LED will be flashing in short green about 2 seconds everytime you restart BA.)

(Note 2) BA will stop to work when it acknowledges Sensor 3 problem occurred.

(The face LED will be flashing in red.)

A7/V7 PLUS-EUR3

A7 PLUS Interface Settings: 2

INTERFACE	SW2	SW3
Pulse	ON	ON
NISR	OFF	ON
RS232	ON	OFF
5V Enable	OFF	OFF

V7 PLUS Interface Settings: 3

INTERFACE	SW2	SW3	SW4
Pulse	ON	ON	
MDB	OFF	ON	
RS232	ON	OFF	
Reserved			ON
Reserved			OFF

FUNCTION	SW1	SW2	SW3	SW4
Scaling Factor (SF) = 1 Decimal Point Position (DPP) = 0	ON			
★ Scaling Factor (SF) = 100 Decimal Point Position (DPP) = 2	OFF			
★ Pulse		ON	ON	
★ MDB		OFF	ON	
★ RS232		ON	OFF	
★ Credit Converting Mode 1 (Note.A)				ON
Credit Converting Mode 2 (Note.B)				OFF

★ Manufacture setting

◆ Remove the front cover and the dip-switch is on the CPU board.
(Note. A) Mode 1: To output the credit which is the same as the input bill.
(Note. B) Mode 2: To output the credit which is 1/10 of the input bill.

◆ Refer to "SW1" setting.