


## XBA-BYN5 Option Switch Settings

Supported bill Ruble 5, 10, 20, 50, 100 5bills.

	FUNCTION	SW1	SW2	SW3	SW4	SW5	SW6	SW7	SW8
★	Reject Ruble 5	ON							
★	Accept Ruble 5	OFF							
★	Reject Ruble 10								
★	Accept Ruble 10								
★	Reject Ruble 20		ON						
★	Accept Ruble 20		OFF						
★	Reject Ruble 50				ON				
★	Accept Ruble 50								
★	Reject Ruble 100				OFF				
★	Accept Ruble 100								
★	Disable Bill Reject 4 Times BA Stop By 30 Sec					ON			
★	Enable Bill Reject 4 Times BA Stop By 30 Sec					OFF			
★	Stack Banknote when Power-up						ON		
★	Reject Banknote when Power-up						OFF		
★	ENABLE IrDA Download							ON	
★	Reserved							OFF	

This dip switch is located at the side of XBA.

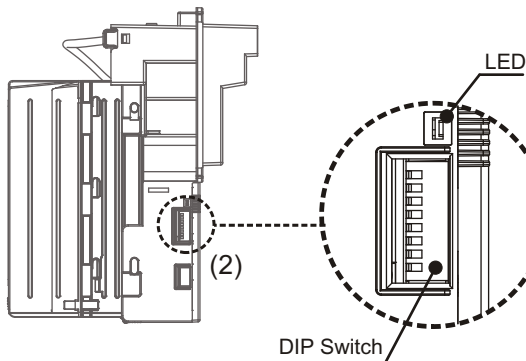


### Currency Assign Data

Interface Bill value	ICT104U	GPT	ICT104V	Pulse	MDB
BV1	5	5	5	5	5
BV2	10	10	10	10	10
BV3	20	20	20	20	20
BV4	50	50	50	50	50
BV5	100		100	100	100

## XBA-BYN5 (Pulse/MDB/ICT104U/GPT/ICT104V)

FUNCTION		SW1	SW2	SW3	SW4	SW5	SW6	SW7	SW8
★	Inhibit Active HIGH	ON							
	Inhibit Active LOW	OFF							
★	Reserved		ON						
	Reserved		OFF						
★	Reserved			ON					
	Reserved			OFF					
★	Reserved				ON				
	Reserved				OFF				
Pulse Mode		MDB Mode			ICT104V Mode				
★	Credit-Pulse Normal HIGH	SCALING_FACTOR 100 DECIMAL_PLACE_OFF 2			Connect with coin changer		ON		
	Credit-Pulse Normal LOW	SCALING_FACTOR 1 DECIMAL_PLACE_OFF 0			Connect with ICT VCCS converter board		OFF		
★	Pulse Mode						ON		
	Other Mode						OFF		
★	Pulse Mode	Other Mode							
	1 pulse / Ruble 5	MDB Mode							
	5 pulse / Ruble 5	GPT Mode							
	10 pulse / Ruble 5	ICT104U Mode							
	50 pulse / Ruble 5	ICT104V Mode							

This dip switch is located on the CPU board, remove the CPU board cover first.

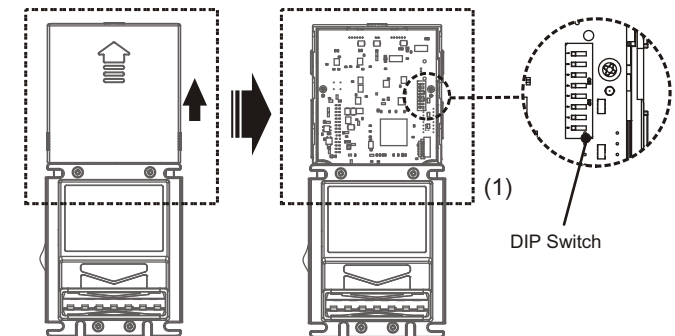

### ★ Manufacture setting

- Note :
- 1.Please reset the bill acceptor after set the dip switch.
  - 2.Dip switches 1 to 5 are only used for pulse protocol.
  - 3.Not calibrate card.