


XBA-HRK5+EUR4 Option Switch Settings

Supported bill HRK 10, 20, 50, 100, 200 5bills.
 € 5, 10, 20, 50 4bills.

	FUNCTION	SW1	SW2	SW3	SW4	SW5	SW6	SW7	SW8
★	Reject HRK 10 & 20 & 50	ON							
★	Accept HRK 10 & 20 & 50	OFF							
★	Reject HRK 100 & 200		ON						
★	Accept HRK 100 & 200		OFF						
★	Reject € 5 & 10			ON					
★	Accept € 5 & 10			OFF					
★	Reject € 20				ON				
★	Accept € 20				OFF				
★	Reject € 50					ON			
★	Accept € 50					OFF			
★	Disable Bill Reject 4 Times BA Stop By 30 Sec						ON		
★	Enable Bill Reject 4 Times BA Stop By 30 Sec						OFF		
★	Stack Banknote when Power-up							ON	
★	Reject Banknote when Power-up							OFF	
★	Enable IrDA Download/ Enable transaction record save								ON
★	Reserved								OFF

This dip switch is located at the side of XBA.

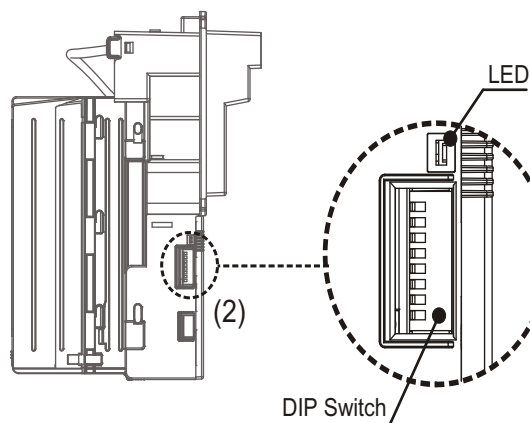


Currency Assign Data

Interface Bill value	ICT104U	GPT	ICT104V	Pulse	MDB
BV1	HRK 10	HRK 10	HRK 10	HRK 10	HRK 10
BV2	HRK 20	HRK 20	HRK 20	HRK 20	HRK 20
BV3	HRK 50	HRK 50	HRK 50	HRK 50	HRK 50
BV4	HRK 100	HRK 100	HRK 100	HRK 100	HRK 100
BV5	HRK 200		HRK 200	HRK 200	HRK 200
BV6	€ 5		€ 5	€ 5	€ 5
BV7	€ 10		€ 10	€ 10	€ 10
BV8	€ 20		€ 20	€ 20	€ 20
BV9	€ 50		€ 50	€ 50	€ 50

XBA-HRK5+EUR4 (Pulse/MDB/GPT/ICT104U/ICT104V)

	FUNCTION	SW1	SW2	SW3	SW4	SW5	SW6	SW7	SW8
	Inhibit Active HIGH	ON							
★	Inhibit Active LOW	OFF							
	Exchange rate 1 EUR = 7 HRK (Pulse and MDB)		ON						
★	Exchange rate 1 EUR = 5 HRK		OFF						
	Reserved			ON					
★	Reserved			OFF					
	Reserved				ON				
★	Reserved				OFF				
	Pulse Mode	MDB Mode			ICT104V Mode				
★	Credit-Pulse Normal HIGH	Scaling Factor (SF) = 100 Decimal Point Position (DPP) = 2			Connect with coin changer		ON		
	Credit-Pulse Normal LOW	Scaling Factor (SF) = 1 Decimal Point Position (DPP) = 0			Connect with ICT VCCS converter board		OFF		
★	Pulse Mode						ON		
	Other Mode						OFF		
	Pulse Mode	Other Mode							
★	1 pulse / HRK 5	MDB Mode						OFF	OFF
	2 pulse / HRK 5	GPT Mode						OFF	ON
	5 pulse / HRK 5	ICT104U Mode						ON	OFF
	10 pulse / HRK 5	ICT104V Mode						ON	ON

This dip switch is located on the CPU board, remove the CPU board cover first.

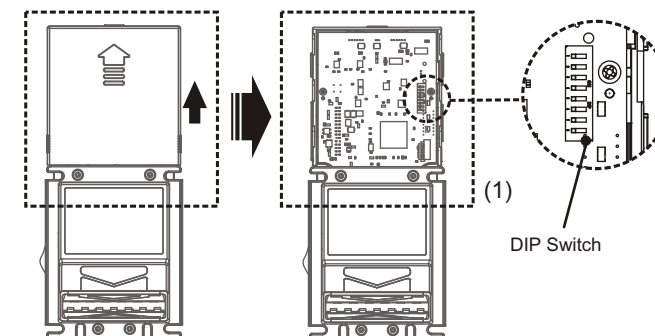

★ Manufacture setting

Note:(1) Please reset the bill acceptor after set the dip switch.
 (2) Dip switches 1 to 5 are only used for pulse protocol.
 (3) calibrate card.