


XBA-HUF6 Option Switch Settings

Supported bill Ft 500, 1000, 2000, 5000, 10000, 20000 6bills.

	FUNCTION	SW1	SW2	SW3	SW4	SW5	SW6	SW7	SW8
★	Reject Ft 500	ON							
★	Accept Ft 500	OFF							
★	Reject Ft 1000		ON						
★	Accept Ft 1000		OFF						
★	Reject Ft 2000			ON					
★	Accept Ft 2000			OFF					
★	Reject Ft 5000				ON				
★	Accept Ft 5000				OFF				
★	Reject Ft 10000 & 20000				ON				
★	Accept Ft 10000 & 20000				OFF				
★	Disable Bill Reject 4 Times BA Stop By 30 Sec					ON			
★	Enable Bill Reject 4 Times BA Stop By 30 Sec					OFF			
★	Stack Banknote when Power-up							ON	
★	Reject Banknote when Power-up							OFF	
	Reserved								ON
★	Reserved								OFF

This dip switch is located at the side of XBA.

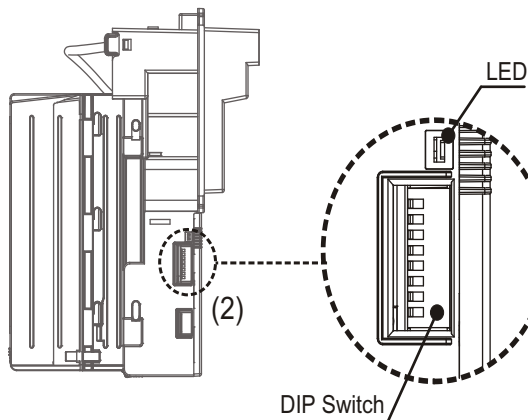


Currency Assign Data

Interface	ICT104U	GPT	ICT104V	Pulse	MDB
BV1	Ft 500	Ft 500	Ft 500	Ft 500	Ft 500
BV2	Ft 1000	Ft 1000	Ft 1000	Ft 1000	Ft 1000
BV3	Ft 2000	Ft 2000	Ft 2000	Ft 2000	Ft 2000
BV4	Ft 5000	Ft 5000	Ft 5000	Ft 5000	Ft 5000
BV5	Ft 10000		Ft 10000	Ft 10000	Ft 10000
BV6	Ft 20000		Ft 20000	Ft 20000	Ft 20000

XBA-HUF6 (Pulse/MDB/ICT104U/GPT/ICT104V)

	FUNCTION	SW1	SW2	SW3	SW4	SW5	SW6	SW7	SW8	
★	Inhibit Active HIGH	ON								
	Inhibit Active LOW	OFF								
★	Reserved									ON
	Reserved									OFF
★	Reserved			ON						
	Reserved			OFF						
★	Reserved				ON					
	Reserved				OFF					
★	Pulse Mode	MDB Mode			ICT104V Mode					
	Credit-Pulse Normal HIGH	Scaling Factor (SF) = 100 Decimal Point Position (DPP) = 2			Connect with coin changer		ON			
	Credit-Pulse Normal LOW	Scaling Factor (SF) = 1 Decimal Point Position (DPP) = 0			Connect with ICT VCCS converter board		OFF			
★	Pulse Mode						ON			
	Other Mode						OFF			
★	Pulse Mode	Other Mode								
	1 pulse / Ft 500	MDB Mode							OFF	OFF
	5 pulse / Ft 500	GPT Mode							OFF	ON
	10 pulse / Ft 500	ICT104U Mode							ON	OFF
	25 pulse / Ft 500	ICT104V Mode							ON	ON

This dip switch is located on the CPU board, remove the CPU board cover first.

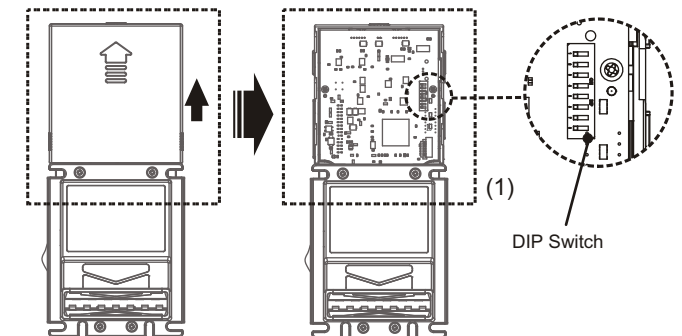

★ Manufacture setting

- Note :
- (1) Please reset the bill acceptor after set the dip switch.
 - (2) Dip switches 1 to 5 are only used for pulse protocol.
 - (3) Not calibrate card.
 - (4) The transaction Record can be saved by USB MSD(only for EX series).