


XBA-LBP3

XBA Option Switch Settings(Pulse/MDB/ICT104U/Parallel A3/ICT104V)

Supported bill LBP 1000, 5000, 10000 3bills.

	FUNCTION	SW1	SW2	SW3	SW4	SW5	SW6	SW7	SW8
★	Reject LBP 1000	ON							
★	Accept LBP 1000	OFF							
★	Reject LBP 5000		ON						
★	Accept LBP 5000		OFF						
★	Reject LBP 10000			ON					
★	Accept LBP 10000			OFF					
★	Reserved				ON				
★	Reserved				OFF				
★	Reserved				ON				
★	Reserved				OFF				
★	Disable Bill Reject 4 Times BA Stop By 30 Sec					ON			
★	Enable Bill Reject 4 Times BA Stop By 30 Sec					OFF			
★	Stack Banknote when Power-up						ON		
★	Reject Banknote when Power-up						OFF		
★	Reserved							ON	
★	Reserved							OFF	

This dip switch is located at the side of XBA.

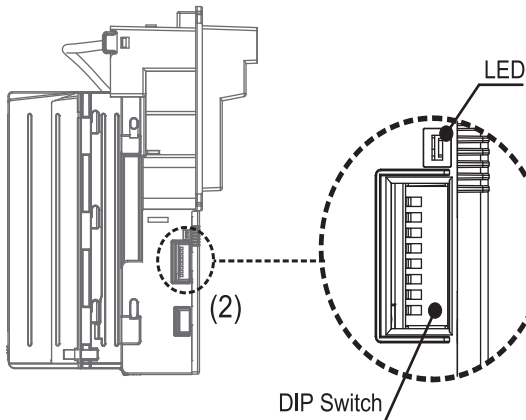


Currency Assign Data

Interface	ICT104U	Parallel A3	ICT104V	Pulse	MDB
Bill value					
BV1	LBP 1000	LBP 1000	LBP 1000	LBP 1000	LBP 1000
BV2	LBP 5000	LBP 5000	LBP 5000	LBP 5000	LBP 5000
BV3	LBP 10000	LBP 10000	LBP 10000	LBP 10000	LBP 10000

XBA-LBP3 (Pulse/MDB/ICT104U/Parallel A3/ICT104V)

	FUNCTION	SW1	SW2	SW3	SW4	SW5	SW6	SW7	SW8	
★	Inhibit Active HIGH	ON								
	Inhibit Active LOW	OFF								
★	Reserved		ON							
	Reserved		OFF							
★	Reserved			ON						
	Reserved			OFF						
★	Reserved				ON					
	Reserved				OFF					
★	Pulse Mode	MDB Mode			ICT104V Mode					
	Credit-Pulse Normal HIGH	Scaling Factor (SF) = 100 Decimal Point Position (DPP) = 2			Connect with coin changer		ON			
	Credit-Pulse Normal LOW	Scaling Factor (SF) = 1 Decimal Point Position (DPP) = 0			Connect with ICT VCCS converter board		OFF			
★	Pulse Mode						ON			
	Other Mode						OFF			
★	Pulse Mode	Other Mode								
	1 pulse / LBP 1000	MDB Mode							OFF	OFF
	5 pulses / LBP 1000	Parallel A3 Mode							OFF	ON
	10 pulses / LBP 1000	ICT104U Mode							ON	OFF
	20 pulses / LBP 1000	ICT104V Mode							ON	ON

This dip switch is located on the CPU board, remove the CPU board cover first.

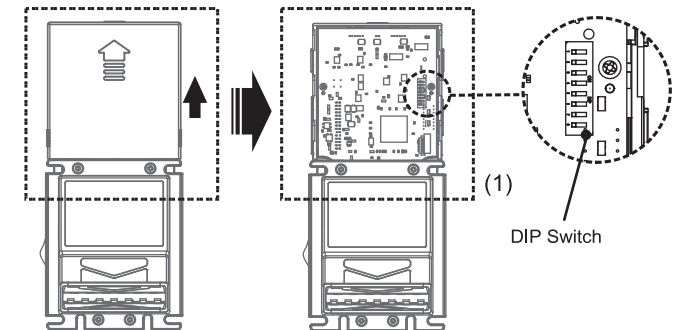

★ Manufacture setting

- Note : (1) Please reset the bill acceptor after set the dip switch.
 (2) Dip switches 1 to 5 are only used for pulse protocol.
 (3) Calibration card is needed.