


XBA-QAR3 Option Switch Settings

Supported bill QAR 1, 5, 10 3bills.

	FUNCTION	SW1	SW2	SW3	SW4	SW5	SW6	SW7	SW8
★	Reject QAR 1 (Note.4)	ON							
★	Accept QAR 1 (Note.4)	OFF							
★	Reject QAR 5		ON						
★	Accept QAR 5		OFF						
★	Reject QAR 10			ON					
★	Accept QAR 10			OFF					
★	Reserved				ON				
★	Reserved				OFF				
★	Reserved				ON				
★	Reserved				OFF				
★	Disable Bill Reject 4 Times BA Stop By 30 Sec					ON			
★	Enable Bill Reject 4 Times BA Stop By 30 Sec					OFF			
★	Stack Banknote when Power-up						ON		
★	Reject Banknote when Power-up						OFF		
★	Reserved								ON
★	Reserved								OFF

This dip switch is located at the side of XBA.

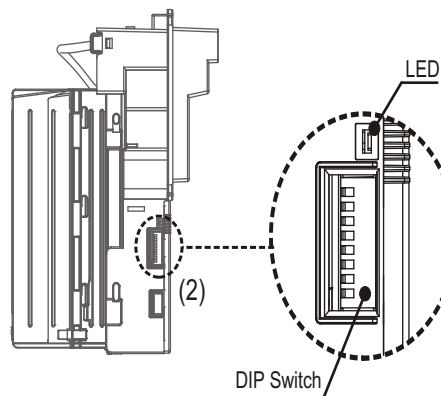


Currency Assign Data

Interface	ICT104U	GPT	ICT104V	Pulse		MDB
				Dip 1 ON	Dip 1 OFF	
BV1	QAR 1	QAR 1	QAR 1			QAR 1
BV2	QAR 5	QAR 5	QAR 5			QAR 5
BV3	QAR 10	QAR 10	QAR 10			QAR 10

XBA-QAR3 (Pulse/MDB/ICT104U/GPT/ICT104V)

	FUNCTION	SW1	SW2	SW3	SW4	SW5	SW6	SW7	SW8	
★	Inhibit Active HIGH	ON								
	Inhibit Active LOW	OFF								
★	Reserved		ON							
	Reserved		OFF							
★	Reserved			ON						
	Reserved			OFF						
★	Reserved				ON					
	Reserved				OFF					
	Pulse Mode	MDB Mode			ICT104V Mode					
★	Credit-Pulse Normal HIGH	Scaling Factor (SF) = 100 Decimal Point Position (DPP) = 2			Connect with coin changer					ON
	Credit-Pulse Normal LOW	Scaling Factor (SF) = 1 Decimal Point Position (DPP) = 0			Connect with ICT VCCS converter board	OFF				
★	Pulse Mode						ON			
	Other Mode						OFF			
	Pulse Mode	Other Mode								
★	1 pulse / QAR 1 & 5	MDB Mode						OFF	OFF	
	2 pulse / QAR 1 & 5	GPT Mode						OFF	ON	
	4 pulse / QAR 1 & 5	ICT104U Mode						ON	OFF	
	20 pulse / QAR 1 & 5	ICT104V Mode						ON	ON	

This dip switch is located on the CPU board, remove the CPU board cover first.

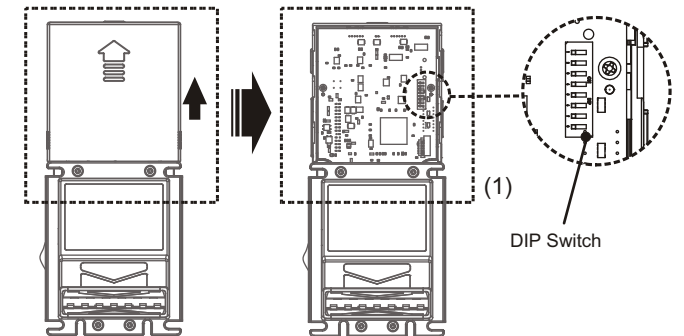

★ Manufacture setting

After setting dip switch of the credit pulses, you should reset the bill acceptor again.

Note : 1.Please reset the bill acceptor after set the dip switch.

2.Dip switches 1 to 5 are only used for pulse protocol.

3.Calibration card is needed.

4.Pulse Mode : When Dip 1 is OFF,One Pulse per QAR 1
When Dip 1 is ON,One Pulse per QAR 5