


# XBA-SGD4 Option Switch Settings

Supported bill SGD 2, 5, 10, 50 4bills.

FUNCTION	SW1	SW2	SW3	SW4	SW5	SW6	SW7	SW8
★ Reject SGD 2	ON							
★ Accept SGD 2	OFF							
★ Reject SGD 5		ON						
★ Accept SGD 5		OFF						
★ Reject SGD 10			ON					
★ Accept SGD 10			OFF					
★ Reject SGD 50				ON				
★ Accept SGD 50				OFF				
★ Reserved					ON			
★ Reserved					OFF			
★ Disable Bill Reject 4 Times BA Stop By 30 Sec						ON		
★ Enable Bill Reject 4 Times BA Stop By 30 Sec						OFF		
★ Stack Banknote when Power-up							ON	
★ Reject Banknote when Power-up							OFF	
★ Reserved								ON
★ Reserved								OFF

This dip switch is located at the side of XBA.

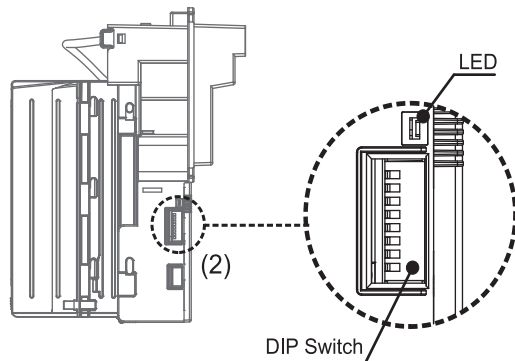


## Currency Assign Data

Interface Bill value	EXRFID	ICT104U	ICT104V	Pulse	MDB
BV1	SGD 2	SGD 2	SGD 2	SGD 2	SGD 2
BV2	SGD 5	SGD 5	SGD 5	SGD 5	SGD 5
BV3	SGD 10	SGD 10	SGD 10	SGD 10	SGD 10
BV4	SGD 50	SGD 50	SGD 50	SGD 50	SGD 50

# XBA-SGD4 (Pulse/MDB/ICT104U/ICT104V/EXRFID)

FUNCTION	SW1	SW2	SW3	SW4	SW5	SW6	SW7	SW8	
★ Inhibit Active HIGH	ON								
Inhibit Active LOW	OFF								
★ Reserved		ON							
★ Reserved		OFF							
★ Reserved			ON						
★ Reserved			OFF						
★ Reserved				ON					
★ Reserved				OFF					
	<b>Pulse Mode</b>		<b>MDB Mode</b>		<b>ICT104V Mode</b>				
★ Credit-Pulse Normal HIGH	Scaling Factor (SF) = 100 Decimal Point Position (DPP) = 2		Connect with coin changer		ON				
★ Credit-Pulse Normal LOW	Scaling Factor (SF) = 1 Decimal Point Position (DPP) = 0		Connect with ICT VCCS converter board		OFF				
★ Pulse Mode						ON			
★ Other Mode						OFF			
	<b>Pulse Mode</b>		<b>Other Mode</b>						
★ 1 pulse / SGD 1	MDB Mode							OFF	OFF
★ 5 pulses / SGD 1	EXRFID Mode							OFF	ON
★ 10 pulses / SGD 1	ICT104U Mode							ON	OFF
★ 25 pulses / SGD 1	ICT104V Mode							ON	ON

This dip switch is located on the CPU board, remove the CPU board cover first.

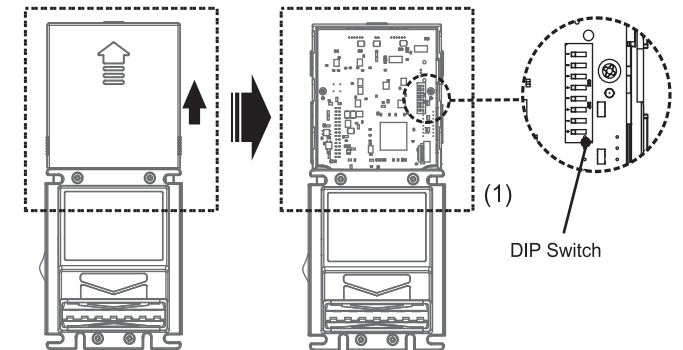

★ Manufacture setting

Note : 1.After setting dip switch of the credit pulses, you should reset the bill acceptor again.  
2.Calibration card is needed.