

V7E/LX7-UAH6

V7E/LX7 Option Switch Settings: 1(Pulse/ICT104U/MDB/RS232 A0)

Supported bill UAH 1, 2, 5, 10, 20, 50 6bills.

V7E/LX7 dip-switch settings and functions:

	FUNCTION	SW1	SW2	SW3	SW4	SW5	SW6	SW7	SW8	SW1	SW2	SW3	SW4
★	Reject UAH 1 & 2	ON											
	Accept UAH 1 & 2	OFF											
★	Reject UAH 5		ON										
★	Accept UAH 5		OFF										
★	Reject UAH 10			ON									
★	Accept UAH 10			OFF									
★	Reject UAH 20				ON								
★	Accept UAH 20				OFF								
★	Reject UAH 50					ON							
★	Accept UAH 50					OFF							
	Reserved					ON							
★	Reserved					OFF							
	Pulse Mode	Other Mode											
★	Harness Disable	BA stops working when fishing					ON						
★	Harness Enable	Normal					OFF						
★	Inhibit Active High						ON						
★	Inhibit Active Low						OFF						
★	1 pulse / UAH 1							OFF	OFF				
	5 pulses / UAH 1							ON	OFF				
	10 pulses / UAH 1							OFF	ON				
	20 pulses / UAH 1							ON	ON				
★	Pulse Speed	50ms LO / 50ms HI							OFF	OFF			
		60ms LO / 300ms HI							ON	OFF			
		30ms LO / 50ms HI							OFF	ON			
		150ms LO / 150ms HI							ON	ON			

★ Manufacture setting.

Note : 1. Default setting

2. Use 2nd and 3rd dip of the internal dip-switch to change different interface protocol.

3. Remove the front cover and the dip-switch in on the CPU board.

(Please refer to "SW1" setting.)

V7E/LX7-UAH6(Pulse/ICT104U/MDB/RS232 A0)

DIP SWITCHES SETTING : 2(Pulse)

	FUNCTION	SW1	SW2	SW3	SW4
★	Pulse Normal High	ON			
	Pulse Normal Low	OFF			
★	Pulse Mode		ON	OFF	
	ICT104U Interface		OFF	ON	
	MDB Interface		ON	ON	
	RS232 A0 Mode		OFF	OFF	
★	Reserved				ON
					OFF

DIP SWITCHES SETTING : 2(ICT104U)

	FUNCTION	SW1	SW2	SW3	SW4
★	Reserved	ON			
		OFF			
	Pulse Mode		ON	OFF	
★	ICT104U Interface		OFF	ON	
	MDB Interface		ON	ON	
	RS232 A0 Mode		OFF	OFF	
★	Reserved				ON
					OFF

DIP SWITCHES SETTING : 2(MDB)

	FUNCTION	SW1	SW2	SW3	SW4
★	Scaling Factor (SF) = 100 Decimal Point Position (DPP) = 2	ON			
	Scaling Factor (SF) = 1 Decimal Point Position (DPP) = 0	OFF			
	Pulse Mode		ON	OFF	
	ICT104U Interface		OFF	ON	
★	MDB Interface		ON	ON	
	RS232 A0 Mode		OFF	OFF	
★	Reserved				ON
					OFF

★ Manufacture setting

Currency Assign Data

Interface Bill value	Pulse	ICT104U	RS232 A0	MDB
BV1	UAH 1	UAH 1	UAH 1	UAH 1
BV2	UAH 2	UAH 2	UAH 2	UAH 2
BV3	UAH 5	UAH 5	UAH 5	UAH 5
BV4	UAH 10	UAH 10	UAH 10	UAH 10
BV5	UAH 20	UAH 20	UAH 20	UAH 20
BV6	UAH 50	UAH 50	UAH 50	UAH 50

DIP SWITCHES SETTING : 2(RS232 A0)

	FUNCTION	SW1	SW2	SW3	SW4
★	Reserved	ON			
		OFF			
	Pulse Mode		ON	OFF	
	ICT104U Interface		OFF	ON	
★	MDB Interface		ON	ON	
	RS232 A0 Mode		OFF	OFF	
★	Reserved				ON
					OFF

★ Manufacture setting

RS232 A0 INFORMATION

BillType Data	
Code	Denomination
1	UAH 1
2	UAH 2
3	UAH 5
4	UAH 10
5	UAH 20
6	UAH 50
7	Reserved
8	Reserved
9	Reserved

Note : (1) Default setting.

(2) Use 2nd and 3rd dip of the internal dip-switch to change different interface protocol.

(3) Remove the front cover and the dip-switch in on the CPU board.

(Please refer to "SW1" setting.)