



AYM5

P70/P5 DIP SWITCHES SETTING : 1(Pulse/M.D.B)

Supported bill MANAT 1(05), 5(05), 10(05), 20(05), 50(05) 5bills.

	FUNCTION	SW1	SW2	SW3	SW4	SW5	SW6	SW7	SW8	SW9	SW10
★	1 Pulse / MANAT 1	OFF	OFF	OFF							
	2 Pulse / MANAT 1	OFF	OFF	ON							
	3 Pulse / MANAT 1	OFF	ON	OFF							
	4 Pulse / MANAT 1	OFF	ON	ON							
	5 Pulse / MANAT 1	ON	OFF	OFF							
	10 Pulse / MANAT 1	ON	OFF	ON							
	20 Pulse / MANAT 1	ON	ON	OFF							
	100 Pulse / MANAT 1	ON	ON	ON							
	Fast output Pulse <small>Lo= 50ms Hi= 100ms</small>				ON						
★	Slow output Pulse <small>Lo= 50ms Hi= 300ms</small>				OFF						
	Inhibit level Active Low				ON						
★	Inhibit level Active High				OFF						
★	Accept MANAT 1										
	Reject MANAT 1					OFF					
★	Accept MANAT 5					ON					
	Reject MANAT 5					OFF					
★	Accept MANAT 10					ON					
	Reject MANAT 10					OFF					
★	Accept MANAT 20					ON					
	Reject MANAT 20					OFF					
★	Accept MANAT 50					ON					
	Reject MANAT 50					OFF					

★ Manufacture setting

Note: (1)Please reset the bill acceptor after set the dip switch.

(2)Dip switches 1 to 5 are only used for pulse protocol.

DIP SWITCHES SETTING : 2(Pulse)

	FUNCTION	SW1	SW2	SW3	SW4
★	Pulse Normal High	ON			
	Pulse Normal Low	OFF			
★	Pulse Mode		ON		
	M.D.B Interface		OFF		
	Harness Disable			ON	
★	Harness Enable			OFF	
	Ignore Sensor Problem (Note 1)				ON
★	Acknowledge Sensor Problem (Note 2)				OFF

★ Manufacture setting

Note : (1) Sensor 6 problem occurred ==>> BA will be still in working order.

(The face LED will be flashing in short green about 2 seconds everytime you restart BA.)

(2) BA will stop to work when it acknowledges Sensor 6 problem occurred.

(The face LED will be flashing in red.)

DIP SWITCHES SETTING : 3(M.D.B)

	FUNCTION	SW1	SW2	SW3	SW4
	Scaling Factor (SF) = 1 Decimal Point Position (DPP) = 0	ON			
★	Scaling Factor (SF) = 100 Decimal Point Position (DPP) = 2	OFF			
	Pulse Mode		ON		
★	M.D.B Interface		OFF		
★	Normal			ON	
	Credit divided by 10 (Note 1)			OFF	
	Ignore Sensor Problem (Note 2)				ON
★	Acknowledge Sensor Problem (Note 3)				OFF

★ Manufacture setting

Note : (1) Refer to "SW1" setting.

(2) Sensor 6 problem occurred ==>> BA will be still in working order.

(The face LED will be flashing in short green about 2 seconds everytime you restart BA.)

(3) BA will stop to work when it acknowledges Sensor 6 problem occurred.

(The face LED will be flashing in red.)