



HUF7

P70/P5 DIP SWITCHES SETTING : 1

Supported bill Ft 200(98), 500(98, 01, 02), 1000(98, 00, 06), 2000(98), 5000(99), 10000(97, 98, 99), 20000(99) 7 bills.

| | FUNCTION | SW1 | SW2 | SW3 | SW4 | SW5 | SW6 | SW7 | SW8 | SW9 | SW10 |
|---|---------------------------|----------------------|-----|-----|-----|-----|-----|-----|-----|-----|------|
| ★ | 1 Pulse / Ft 100 | OFF | OFF | OFF | | | | | | | |
| | 2 Pulse / Ft 100 | OFF | OFF | ON | | | | | | | |
| | 3 Pulse / Ft 100 | OFF | ON | OFF | | | | | | | |
| | 4 Pulse / Ft 100 | OFF | ON | ON | | | | | | | |
| | 5 Pulse / Ft 100 | ON | OFF | OFF | | | | | | | |
| | 10 Pulse / Ft 100 | ON | OFF | ON | | | | | | | |
| | 20 Pulse / Ft 100 | ON | ON | OFF | | | | | | | |
| | 100 Pulse / Ft 100 | ON | ON | ON | | | | | | | |
| | Fast output Pulse | Lo= 50ms Hi=100ms | | | ON | | | | | | |
| ★ | Slow output Pulse | Lo= 50ms Hi=300ms | | | OFF | | | | | | |
| | Inhibit level Active Low | | | | | ON | | | | | |
| ★ | Inhibit level Active High | | | | | OFF | | | | | |
| ★ | Accept Ft 200 & 500 | | | | | | ON | | | | |
| | Reject Ft 200 & 500 | | | | | | OFF | | | | |
| ★ | Accept Ft 1000 & 2000 | | | | | | | ON | | | |
| | Reject Ft 1000 & 2000 | | | | | | | OFF | | | |
| ★ | Accept Ft 5000 | | | | | | | | ON | | |
| | Reject Ft 5000 | | | | | | | | OFF | | |
| ★ | Accept Ft 10000 | | | | | | | | | ON | |
| | Reject Ft 10000 | | | | | | | | | OFF | |
| ★ | Accept Ft 20000 | | | | | | | | | | ON |
| | Reject Ft 20000 | | | | | | | | | | OFF |

★ Manufacture setting

Note: (1)Please reset the bill acceptor after set the dip switch.

(2)Dip switches 1 to 5 are only used for pulse protocol.

DIP SWITCHES SETTING : 2

| | FUNCTION | SW1 | SW2 | SW3 | SW4 |
|---|-------------------------------------|-----|-----|-----|-----|
| ★ | Pulse Normal High | ON | | | |
| | Pulse Normal Low | OFF | | | |
| | Pulse Protocol | | ON | | |
| | ICT Protocol | | OFF | | |
| | HOLD | | | ON | |
| | | | | OFF | |
| | Ignore Sensor Problem(Note 1) | | | | ON |
| ★ | Acknowledge Sensor Problem (Note 2) | | | | OFF |

★ Manufacture setting

Note : (1) Sensor 6 problem occurred ==>> BA will be still in working order.

(The face LED will be flashing in short green about 2 seconds everytime you restart BA.)

(2) BA will stop to work when it acknowledges Sensor 6 problem occurred.

(The face LED will be flashing in red.)

