



RUR5

P70/P5 DIP SWITCHES SETTING : 1(Pulse/M.D.B)

Supported bill Ruble 10, 50, 100, 500, 1000 5bills.

	FUNCTION	SW1	SW2	SW3	SW4	SW5	SW6	SW7	SW8	SW9	SW10	
★	1 Pulse / Ruble 10	OFF	OFF	OFF								
	2 Pulse / Ruble 10	OFF	OFF	ON								
	3 Pulse / Ruble 10	OFF	ON	OFF								
	4 Pulse / Ruble 10	OFF	ON	ON								
	5 Pulse / Ruble 10	ON	OFF	OFF								
	10 Pulse / Ruble 10	ON	OFF	ON								
	20 Pulse / Ruble 10	ON	ON	OFF								
	100 Pulse / Ruble 10	ON	ON	ON								
	Fast output Pulse <small>Lo= 50ms Hi= 100ms</small>											ON
★	Slow output Pulse <small>Lo= 50ms Hi= 300ms</small>											OFF
	Inhibit level Active Low				ON							
★	Inhibit level Active High				OFF							
★	Accept Ruble 10						ON					
	Reject Ruble 10						OFF					
★	Accept Ruble 50							ON				
	Reject Ruble 50							OFF				
★	Accept Ruble 100								ON			
	Reject Ruble 100								OFF			
★	Accept Ruble 500									ON		
	Reject Ruble 500									OFF		
★	Accept Ruble 1000										ON	
	Reject Ruble 1000										OFF	

★ Manufacture setting

Note: (1)Please reset the bill acceptor after set the dip switch.

(2)Dip switches 1 to 5 are only used for pulse protocol.

DIP SWITCHES SETTING : 2(Pulse)

	FUNCTION	SW1	SW2	SW3	SW4
★	Pulse Normal High	ON			
	Pulse Normal Low	OFF			
★	Pulse Mode		ON		
	M.D.B Interface		OFF		
	Harness Disable			ON	
★	Harness Enable			OFF	
	Ignore Sensor Problem (Note 1)				ON
★	Acknowledge Sensor Problem (Note 2)				OFF

★ Manufacture setting

Note : (1) Sensor 6 problem occurred ==>> BA will be still in working order.

(The face LED will be flashing in short green about 2 seconds everytime you restart BA.)

(2) BA will stop to work when it acknowledges Sensor 6 problem occurred.

(The face LED will be flashing in red.)

DIP SWITCHES SETTING : 3(M.D.B)

	FUNCTION	SW1	SW2	SW3	SW4
	Scaling Factor (SF) = 1 Decimal Point Position (DPP) = 0	ON			
★	Scaling Factor (SF) = 100 Decimal Point Position (DPP) = 2	OFF			
	Pulse Mode		ON		
★	M.D.B Interface		OFF		
	Reserved			ON	
★				OFF	
	Ignore Sensor Problem (Note 1)				ON
★	Acknowledge Sensor Problem (Note 2)				OFF

★ Manufacture setting

Note : (1) Sensor 6 problem occurred ==>>> BA will be still in working order.

(The face LED will be flashing in short green about 2 seconds everytime you restart BA.)

(2) BA will stop to work when it acknowledges Sensor 6 problem occurred.

(The face LED will be flashing in red.)