



VND3

P70/P5 DIP SWITCHES SETTING : 1(Pulse/M.D.B)

Supported bill VND 10000, 20000, 50000 3bills.

	FUNCTION	SW1	SW2	SW3	SW4	SW5	SW6	SW7	SW8	SW9	SW10	
★	1 Pulse / VND 10000	OFF	OFF	OFF								
	2 Pulse / VND 10000	OFF	OFF	ON								
	3 Pulse / VND 10000	OFF	ON	OFF								
	4 Pulse / VND 10000	OFF	ON	ON								
	5 Pulse / VND 10000	ON	OFF	OFF								
	10 Pulse / VND 10000	ON	OFF	ON								
	20 Pulse / VND 10000	ON	ON	OFF								
	100 Pulse / VND 10000	ON	ON	ON								
	Fast output Pulse <small>Lo= 50ms Hi= 100ms</small>				ON							
★	Slow output Pulse <small>Lo= 50ms Hi= 300ms</small>				OFF							
	Inhibit level Active Low				ON							
★	Inhibit level Active High				OFF							
★	Accept VND 10000						ON					
	Reject VND 10000						OFF					
★	Accept VND 20000								ON			
	Reject VND 20000								OFF			
★	Accept VND 50000									ON		
	Reject VND 50000									OFF		
	Reserved										ON	
★	Reserved										OFF	
	Reserved											ON
★	Reserved											OFF

★ Manufacture setting

Note: (1)Please reset the bill acceptor after set the dip switch.

(2)Dip switches 1 to 5 are only used for pulse protocol.

DIP SWITCHES SETTING : 2(Pulse)

	FUNCTION	SW1	SW2	SW3	SW4
★	Pulse Normal High	ON			
	Pulse Normal Low	OFF			
★	Pulse Mode		ON		
	M.D.B Interface		OFF		
	Harness Disable			ON	
★	Harness Enable			OFF	
	Ignore Sensor Problem (Note 1)				ON
★	Acknowledge Sensor Problem (Note 2)				OFF

★ Manufacture setting

Note : (1) Sensor 6 problem occurred ==>> BA will be still in working order.

(The face LED will be flashing in short green about 2 seconds everytime you restart BA.)

(2) BA will stop to work when it acknowledges Sensor 6 problem occurred.

(The face LED will be flashing in red.)

DIP SWITCHES SETTING : 3(M.D.B)

	FUNCTION	SW1	SW2	SW3	SW4
	Scaling Factor (SF) = 1 Decimal Point Position (DPP) = 0	ON			
★	Scaling Factor (SF) = 100 Decimal Point Position (DPP) = 2	OFF			
	Pulse Mode		ON		
★	M.D.B Interface		OFF		
★	Normal			ON	
	Credit divided by 10 (Note 1)			OFF	
	Ignore Sensor Problem (Note 2)				ON
★	Acknowledge Sensor Problem (Note 3)				OFF

★ Manufacture setting

Note : (1) Refer to "SW1" setting.

(2) Sensor 6 problem occurred ==>> BA will be still in working order.

(The face LED will be flashing in short green about 2 seconds everytime you restart BA.)

(3) BA will stop to work when it acknowledges Sensor 6 problem occurred.

(The face LED will be flashing in red.)