



## IRR6

### P85/P5 DIP SWITCHES SETTING : 1(Pulse/M.D.B)

Supported bill Rial 1000, 2000, 5000, 10000, 20000, 50000  
6bills.

FUNCTION	SW1	SW2	SW3	SW4	SW5	SW6	SW7	SW8	SW9	SW10
★ 1 Pulse / Rial 1000	OFF	OFF	OFF							
2 Pulse / Rial 1000	OFF	OFF	ON							
3 Pulse / Rial 1000	OFF	ON	OFF							
4 Pulse / Rial 1000	OFF	ON	ON							
5 Pulse / Rial 1000	ON	OFF	OFF							
10 Pulse / Rial 1000	ON	OFF	ON							
20 Pulse / Rial 1000	ON	ON	OFF							
100 Pulse / Rial 1000	ON	ON	ON							
Fast output Pulse Lo= 50ms Hi=100ms				ON						
★ Slow output Pulse Lo= 50ms Hi=300ms				OFF						
Inhibit level Active Low					ON					
★ Inhibit level Active High					OFF					
★ Accept Rial 1000						ON				
Reject Rial 1000						OFF				
★ Accept Rial 2000							ON			
Reject Rial 2000							OFF			
★ Accept Rial 5000								ON		
Reject Rial 5000								OFF		
★ Accept Rial 10000									ON	
Reject Rial 10000									OFF	
★ Accept Rial 20000 & 50000										ON
Reject Rial 20000 & 50000										OFF

★ Manufacture setting

Note: (1) Please reset the bill acceptor after set the dip switch.  
(2) Dip switches 1 to 5 are only used for pulse protocol.

## P85-IRR6/P5(Pulse/M.D.B)

### DIP SWITCHES SETTING : 2(Pulse)

FUNCTION	SW1	SW2	SW3	SW4
★ Pulse Normal High	ON			
Pulse Normal Low	OFF			
★ Pulse Mode		ON		
M.D.B Interface		OFF		
Harness Disable			ON	
★ Harness Enable			OFF	
Ignore Sensor Problem (Note 1)				ON
★ Acknowledge Sensor Problem (Note 2)				OFF

★ Manufacture setting

Note : (1) Sensor 6 problem occurred ==>> BA will be still in working order.

(The face LED will be flashing in short green about 2 seconds everytime you restart BA.)

(2) BA will stop working when it acknowledges Sensor 6 problem occurred.

(The face LED will be flashing in red.)

### DIP SWITCHES SETTING : 3(M.D.B)

FUNCTION	SW1	SW2	SW3	SW4
Scaling Factor (SF) = 1 Decimal Point Position (DPP) = 0	ON			
★ Scaling Factor (SF) = 100 Decimal Point Position (DPP) = 2	OFF			
Pulse Mode		ON		
★ MDB Interface		OFF		
Reserved			ON	
★ Ignore Sensor Problem (Note 1)			OFF	
★ Acknowledge Sensor Problem (Note 2)				OFF

★ Manufacture setting

Note : (1) Sensor 6 problem occurred ==>> BA will be still in working order.

(The face LED will be flashing in short green about 2 seconds everytime you restart BA.)

(2) BA will stop working when it acknowledges Sensor 6 problem occurred.

(The face LED will be flashing in red.)