

TRY6

L77&L77F DIP SWITCHES SETTING : 1(Pulse/RS232 A0/RS232 B1)

Supported bill Lira 5, 10, 20, 50, 100, 200 6bills.

	FUNCTION	SW1	SW2	SW3	SW4	SW5	SW6	SW7	SW8	SW9	SW10
★	1 Pulse / Lira 5	OFF	OFF	OFF							
	2 Pulse / Lira 5	OFF	OFF	ON							
	3 Pulse / Lira 5	OFF	ON	OFF							
	4 Pulse / Lira 5	OFF	ON	ON							
	5 Pulse / Lira 5	ON	OFF	OFF							
	10 Pulse / Lira 5	ON	OFF	ON							
	20 Pulse / Lira 5	ON	ON	OFF							
	100 Pulse / Lira 5	ON	ON	ON							
	Fast output Pulse Lo= 50ms Hi=100ms				ON						
★	Slow output Pulse Lo= 50ms Hi=300ms				OFF						
	Inhibit level Active Low					ON					
★	Inhibit level Active High					OFF					
★	Accept Lira 5 & 10						ON				
	Reject Lira 5 & 10						OFF				
★	Accept Lira 20							ON			
	Reject Lira 20							OFF			
★	Accept Lira 50								ON		
	Reject Lira 50								OFF		
★	Accept Lira 100									ON	
	Reject Lira 100									OFF	
★	Accept Lira 200										ON
	Reject Lira 200										OFF

★ Manufacture setting

Note:(1) Please reset the bill acceptor after any changes on Dip switch.

(2) Dip switch 1 to 5 are only for Pulse mode.

(3) Turn this dip to with restart the bill acceptor will restore ccTalk address to its default value of 40 and the encryption key to its default value of 123456.

L77&L77F-TRY6(Pulse/RS232 A0/RS232 B1)

DIP SWITCHES SETTING : 2(Pulse)

Currency Assign Data

	FUNCTION	SW1	SW2	SW3	SW4
★	Pulse Normal High	ON			
	Pulse Normal Low	OFF			
★	Pulse Mode		ON	OFF	
★	Reserved				ON
					OFF

★ Manufacture setting

Interface Bill value	Pulse	RS232 A0	RS232 B1
BV1	Lira 5	Lira 5	Lira 5
BV2	Lira 10	Lira 10	Lira 10
BV3	Lira 20	Lira 20	Lira 20
BV4	Lira 50	Lira 50	Lira 50
BV5	Lira 100	Lira 100	Lira 100
BV6	Lira 200	Lira 200	Lira 200

DIP SWITCHES SETTING : 2(RS232 B1)

	FUNCTION	SW1	SW2	SW3	SW4
	8-bit checksum	ON			
★	CRC 16-bit checksum	OFF			
★	RS232 B1 Interface		OFF	OFF	
	RS232 B1 Parameters Restore Switch Please see "Note" for detail		OFF	ON	
★	Encryption Mode				ON
	Decrypt Mode				OFF

★ Manufacture setting

Note: 1 · Put this switch to on and reset power will restore the RS232 B1 address to its default value of 40 and the encryption key to its default value of 123456.

2 · L77 optional.

DIP SWITCHES SETTING : 2(RS232 A0)

	FUNCTION	SW1	SW2	SW3	SW4
★	Reserved	ON			
		OFF			
★	RS232 A0 Mode		ON	ON	
★	Reserved				ON
					OFF

★ Manufacture setting

ESCROW DATA	
Code	Denomination
61h	Lira 0
62h	Lira 0
63h	Lira 5
64h	Lira 10
65h	Lira 20
66h	Lira 50
67h	Lira 100
68h	Lira 200

CURRENCY ASSIGN DATA			
Code	Country	Denomination	EXP
61h	7Bh	00h	00h
62h	7Bh	00h	00h
63h	7Bh	05h	00h
64h	7Bh	0Ah	00h
65h	7Bh	14h	00h
66h	7Bh	32h	00h
67h	7Bh	64h	00h
68h	7Bh	C8h	00h