



## EUR4

### L77-P3/P6 DIP SWITCHES SETTING : 1(Pulse/ccTalk/Smiley)

Supported bill Euro 5, 10, 20, 50 4bills.

	FUNCTION	SW1	SW2	SW3	SW4	SW5	SW6	SW7	SW8	SW9	SW10
★	1 Pulse / Euro 5	OFF	OFF	OFF							
	2 Pulse / Euro 5	OFF	OFF	ON							
	3 Pulse / Euro 5	OFF	ON	OFF							
	4 Pulse / Euro 5	OFF	ON	ON							
	5 Pulse / Euro 5	ON	OFF	OFF							
	10 Pulse / Euro 5	ON	OFF	ON							
	20 Pulse / Euro 5	ON	ON	OFF							
	100 Pulse / Euro 5	ON	ON	ON							
	Fast output Pulse Lo= 50ms Hi=100ms				ON						
★	Slow output Pulse Lo= 50ms Hi=300ms				OFF						
	Inhibit level Active Low				ON						
★	Inhibit level Active High				OFF						
★	Accept Euro 5				ON						
	Reject Euro 5				OFF						
★	Accept Euro 10				ON						
	Reject Euro 10				OFF						
★	Accept Euro 20				ON						
	Reject Euro 20				OFF						
★	Accept Euro 50				ON						
	Reject Euro 50				OFF						
	Reserved				ON						
★					OFF						

★ Manufacture setting

Note:(1) Please reset the bill acceptor after set the dip switch.

(2) Dip switches 1 to 5 are only used for pulse protocol.

## L77-EUR4(Pulse/ccTalk/Smiley)

### DIP SWITCHES SETTING : 2(Pulse)

	FUNCTION	SW1	SW2	SW3	SW4
★	Pulse Normal High	ON			
	Pulse Normal Low	OFF			
★	Pulse Mode		ON	OFF	
★	Reserved				ON
					OFF

★ Manufacture setting

### DIP SWITCHES SETTING : 2(ccTalk)

	FUNCTION	SW1	SW2	SW3	SW4
★	Reserved	ON			
		OFF			
★	cctalk Interface		OFF	OFF	
★	ccTalk Parameters Restore Switch Please see "Note" for detail		OFF	ON	
★	Encryption Mode				ON
	Decrypt Mode				OFF

★ Manufacture setting

Note: Put this switch to on and reset power will restore the ccTalk address to its default value of 40 and the encryption key to its default value of 123456.

### DIP SWITCHES SETTING : 2(Smiley)

	FUNCTION	SW1	SW2	SW3	SW4
★	Reserved	ON			
		OFF			
★	Smiley Mode		ON	ON	
★	Reserved				ON
					OFF

★ Manufacture setting