

## NBA-CZK6

### NBA DIP SWITCH SETTINGS: 1 (Pulse/ICT104U/RS232 A0/RS232 A1/ccTalk)

Supported bill CZK\$ 100, 200, 500, 1000, 2000, 5000 6bills.

	FUNCTION	SW1	SW2	SW3	SW4	SW5	SW6	SW7	SW8	
⊙	Accept CZK\$ 100	ON								
	Reject CZK\$ 100	OFF								
⊙	Accept CZK\$ 200									ON
	Reject CZK\$ 200									OFF
⊙	Accept CZK\$ 500			ON						
	Reject CZK\$ 500			OFF						
⊙	Accept CZK\$ 1000				ON					
	Reject CZK\$ 1000				OFF					
⊙	Accept CZK\$ 2000					ON				
	Reject CZK\$ 2000					OFF				
⊙	Accept CZK\$ 5000						ON			
	Reject CZK\$ 5000						OFF			
▲ ⊙	Harness Enable							ON		
▲	Harness Disable							OFF		
▲ ⊙	Inhibit Active High	CRC 16-bit checksum(ccTalk only)							ON	
▲	Inhibit Active Low	8-bit checksum (ccTalk only)							OFF	

## DIP SWITCHES SETTING : 2

	FUNCTION	SW1	SW2	SW3	SW4	SW1	SW2	SW3	SW4
▲ ◎	1 pulse / CZK\$ 100	OFF	OFF						
▲	2 pulses / CZK\$ 100	ON	OFF						
▲	4 pulses / CZK\$ 100	OFF	ON						
▲	10 pulses / CZK\$ 100	ON	ON						
▲ ◎	Pulse Speed	50ms LO / 50ms HI		OFF	OFF				
▲		30ms LO / 50ms HI		ON	OFF				
▲		60ms LO / 300ms HI		OFF	ON				
▲		150ms LO / 150ms HI		ON	ON				
◎	ccTalk Mode					OFF	OFF		
	ICT104U Mode					ON	OFF		
	RS232 A1 Mode					OFF	ON		
	RS232 A0 Mode					ON	ON		
	ccTalk Parameters Restore Switch Please see "Note.2" for detail							ON	
◎	ccTalk Interface							OFF	
◎	Encryption Mode(for ccTalk Mode use only)							ON	
	Decrypt Mode							OFF	

(⊙) Factory setting. (▲) For pulse interface only.

Note: (2) SW2 (front panel right block) Dip Switch 1 to 4 are only for Pulse mode.  
if set to others mode, SW2 Dip Switch 1 to 4 can change to different interface.

## NBA-CZK6(Pulse/ICT104U/RS232 A0/RS232 A1/ccTalk)

### DIP SWITCHES SETTING : 3

	FUNCTION	SW1	SW2	SW3	SW4
▲ ⊙	Credit-Pulse Normal HIGH	ON			
▲	Credit-Pulse Normal LOW	OFF			
▲ ⊙	Pulse Mode		ON		
	Others Mode (Note.2)		OFF		
	RFID function Enable			ON	
⊙	RFID function Disable			OFF	
	Optical anti-fishing malfunction, BA will be still in working order				
⊙	BA will stop work when it acknowledges optical anti-fishing malfunction.				

(⊙) Factory setting.

(▲) For pulse interface only.

Note: (1) Please reset the bill acceptor after any changes on Dip switch.

(2) SW2 (front panel right block) Dip Switch 1 to 4 are only for Pulse mode.  
if set to others mode, SW2 Dip Switch 1 to 4 can change to different interface.

(3) Turn this dip to with restart the bill acceptor will restore ccTalk address to its default value of 40 and the encryption key to its default value of 123456.

(4) Barcode reader calibration procedure :

1. Turn all bill values under reject mode.

2. Restart power.

3. Insert the blank barcode ticket to calibrate the reader head, and NBA's bezel flashing in green for 2 seconds.

4. Restore the original dip switch setting and restart the power.

(5) RS232 A0 Information:

BillType Data	
Code	Denomination
1	Reserved
2	CZK\$ 100
3	CZK\$ 200
4	CZK\$ 500
5	CZK\$ 1000
6	CZK\$ 2000
7	CZK\$ 5000
8	Reserved
9	Reserved

## Currency Assign Data

Interface Bill value	Pulse	RS232 A0	ICT104U	RS232 A1	ccTalk
BV1	CZK\$ 100	CZK\$ 100	CZK\$ 100	CZK\$ 100	CZK\$ 100
BV2	CZK\$ 200	CZK\$ 200	CZK\$ 200	CZK\$ 200	CZK\$ 200
BV3	CZK\$ 500	CZK\$ 500	CZK\$ 500	CZK\$ 500	CZK\$ 500
BV4	CZK\$ 1000	CZK\$ 1000	CZK\$ 1000	CZK\$ 1000	CZK\$ 1000
BV5	CZK\$ 2000	CZK\$ 2000	CZK\$ 2000	CZK\$ 2000	CZK\$ 2000
BV6	CZK\$ 5000	CZK\$ 5000	CZK\$ 5000	CZK\$ 5000	CZK\$ 5000