

NDR Series Option Switch Settings: 1(Pulse/NDR/ICT-DC)

Interface Settings

FUNCTION	SW1	SW2
ICT-DC	ON	ON
Pulse	ON	OFF
Reserve	OFF	ON
NDR	OFF	OFF

★ Manufacture setting

	FUNCTION	SW3	SW4	SW5	SW6	SW7	
	NDR UART baud rate 19200	ON					
★	NDR UART baud rate 9600	OFF					
	Disable over reject exception						ON
★	Enable over reject exception						OFF
	Disable when reaching low level sensor (Note.1)			ON			
★	Keep working when reaching low level sensor			OFF			
	Reserve				ON		
★	Reserve				OFF		
	Credit_No normal close					ON	
★	Credit_No normal open					OFF	

★ Manufacture setting.

**Please keep SW8 OFF

Note 1: This function is available when the interface is pulse