

XBA mini-RUB7

XBA mini Option Switch Settings: 1(Pulse/MDB/JPSTD/ICT104V/ICT104U)

Supported bill RUB 5, 10, 50, 100, 200, 500, 1000 7bills.

XBA mini dip-switch settings and functions:

FUNCTION	SW1	SW2	SW3	SW4	SW5	SW6	SW7	SW8	SW1	SW2	SW3	SW4
★ Reject RUB 5 (Note.5)	ON											
★ Accept RUB 5 (Note.5)	OFF											
★ Reject RUB 10		ON										
★ Accept RUB 10		OFF										
★ Reject RUB 50 & 100			ON									
★ Accept RUB 50 & 100			OFF									
★ Reject RUB 200				ON								
★ Accept RUB 200				OFF								
★ Reject RUB 500 & 1000					ON							
★ Accept RUB 500 & 1000					OFF							
★ Disable Bill Reject 4 Times BA Stop By 30 Sec						ON						
★ Enable Bill Reject 4 Times BA Stop By 30 Sec						OFF						
★ Stack Banknote when Power-up							ON					
★ Reject Banknote when Power-up							OFF					
★ Reserved								ON				
★ Reserved								OFF				
★ Inhibit Active High									ON			
★ Inhibit Active Low									OFF			
★ Reserved										ON		
★ Reserved										OFF		
★ Interface Timing Conversion											OFF	OFF
											ON	OFF
											OFF	ON
											ON	ON

★ Manufacture setting

Note : (1) After setting dip switch of the credit pulses,you should reset the bill acceptor again.

(2) Please reset the bill acceptor after set the dip switch.

(3) Dip switches 1 to 5 are only used for pulse protocol.

(4) Calibration card is needed.

(5) Pulse Mode: When Dip 1 is OFF,One Pulse per RUB 5.
When Dip 1 is ON ,One Pulse per RUB 10.

XBA mini-RUB7(Pulse/MDB/JPSTD/ICT104V/ICT104U)

Interface Settings: 2(Pulse)

INTERFACE	SW1	SW2	SW3	SW4
★ Credit-Pulse Normal HIGH	ON			
Credit-Pulse Normal LOW	OFF			
★ Pulse Mode		ON		
★ Other Mode		OFF		
★ 1 pulse / RUB 5 & 10			OFF	OFF
2 pulses / RUB 5 & 10			OFF	ON
5 pulses / RUB 5 & 10			ON	OFF
10 pulses / RUB 5 & 10			ON	ON

★ Manufacture setting

Interface Settings: 2(MDB)

FUNCTION	SW1	SW2	SW3	SW4
★ Scaling Factor (SF) = 100 Decimal Point Position (DPP) = 2	ON			
Scaling Factor (SF) = 1 Decimal Point Position (DPP) = 0	OFF			
Pulse Mode		ON		
★ Other Mode		OFF		
★ MDB Mode			OFF	OFF
JPSTD Mode			OFF	ON
ICT104U Mode			ON	OFF
ICT104V Mode			ON	ON

★ Manufacture setting

Interface Settings: 2(ICT104V)

INTERFACE	SW1	SW2	SW3	SW4
★ Connect with coin changer	ON			
Connect with ICT JPSTD converter board	OFF			
Pulse Mode		ON		
★ Other Mode		OFF		
MDB Mode			OFF	OFF
JPSTD Mode			OFF	ON
ICT104U Mode			ON	OFF
★ ICT104V Mode			ON	ON

★ Manufacture setting

Interface Settings: 2(Other)

INTERFACE	SW1	SW2	SW3	SW4
★ Reserved	ON			
Reserved	OFF			
Pulse Mode		ON		
★ Other Mode		OFF		
MDB Mode			OFF	OFF
JPSTD Mode			OFF	ON
ICT104U Mode			ON	OFF
ICT104V Mode			ON	ON

★ Manufacture setting

Currency Assign Data

Interface Bill value	JPSTD	ICT104U	ICT104V	Pulse	MDB
BV1	RUB 10	RUB 10	RUB 10	RUB 10	RUB 10
BV2		RUB 50	RUB 50	RUB 50	RUB 50
BV3		RUB 100	RUB 100	RUB 100	RUB 100
BV4		RUB 500	RUB 500	RUB 500	RUB 500
BV5		RUB 1000	RUB 1000	RUB 1000	RUB 1000
BV6					
BV7		RUB 200	RUB 200	RUB 200	RUB 200
BV8					
BV9		RUB 5	RUB 5	RUB 5	RUB 5