

## XBA-AWG7(AWG3+USD4) Option Switch Settings 1:

Supported bill **AWG 10, 25, 50**


**USD 1, 5, 10, 20 7 bills.**

	FUNCTION	SW1	SW2	SW3	SW4	SW5	SW6	SW7	SW8
★	Reject AWG 10	ON							
★	Accept AWG 10	OFF							
★	Reject AWG 25		ON						
★	Accept AWG 25		OFF						
★	Reject AWG 50			ON					
★	Accept AWG 50			OFF					
★	Reject USD 1 & 5				ON				
★	Accept USD 1 & 5				OFF				
★	Reject USD 10 & 20					ON			
★	Accept USD 10 & 20					OFF			
★	Disable Bill Reject 4 Times BA Stop By 30 Sec						ON		
★	Enable Bill Reject 4 Times BA Stop By 30 Sec						OFF		
★	Stack Banknote when Power-up							ON	
★	Reject Banknote when Power-up							OFF	
★	Reserved								ON
★	Reserved								OFF

## Currency Assign Data

Bill value	Interface	MDB
BV1		AWG 10
BV2		AWG 20
BV3		AWG 50
BV4		USD 1
BV5		USD 5
BV6		USD 10
BV7		USD 20

This dip switch is located at the side of XBA.

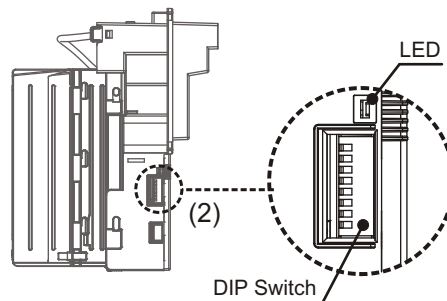

## XBA-AWG7(AWG3+USD4) Switch Settings 2: (MDB)

	FUNCTION	SW1	SW2	SW3	SW4	SW5	SW6	SW7	SW8
★	Exchange rate 1 USD=1.75 AWG	ON							
★	Exchange rate 1 USD=1.00 AWG	OFF							
★	Reserved		ON						
★	Reserved		OFF						
★	Reserved			ON					
★	Reserved			OFF					
★	Reserved				ON				
★	Reserved				OFF				
★	Scaling Factor (SF) = 100 Decimal Point Position (DPP) = 2					ON			
★	Reserved					OFF			
★	Reserved						ON		
★	Reserved						OFF		
★	Reserved							ON	
★	Reserved							OFF	
★	Reserved								ON
★	Reserved								OFF

★ Manufacture setting

**Note:** Not calibrate card.

This dip switch is located on the CPU board, remove the CPU board cover first.

