

TAO-A.V-ARS7

TAO-A.V Option Switch Settings: 1(Pulse/ICT104V/ICT104U/MDB)

Supported bill ARS 5, 10, 20, 50, 100, 200, 500 7bills.

TAO-A.V dip-switch settings and functions:

	FUNCTION	SW1	SW2	SW3	SW4	SW5	SW6	SW7	SW8	SW1	SW2	SW3	SW4
★	Reject ARS 5	ON											
	Accept ARS 5	OFF											
★	Reject ARS 10		ON										
	Accept ARS 10		OFF										
★	Reject ARS 20			ON									
	Accept ARS 20			OFF									
★	Reject ARS 50 & 100			ON									
	Accept ARS 50 & 100			OFF									
★	Reject ARS 200 & 500				ON								
	Accept ARS 200 & 500				OFF								
	Reserved				ON								
★	Reserved				OFF								
	Pulse Mode												
	Other Mode												
	Harness Disable	BA stops working when fishing							ON				
★	Harness Enable	Normal							OFF				
	Inhibit Active High								ON				
★	Inhibit Active Low								OFF				
	1 pulse / ARS 5								OFF	OFF			
	2 pulses / ARS 5								ON	OFF			
★	5 pulses / ARS 5								OFF	ON			
	20 pulses / ARS 5								ON	ON			
★	Interface Timing Conversion	50ms LO / 50ms HI								OFF	OFF		
		60ms LO / 300ms HI								ON	OFF		
		30ms LO / 50ms HI								OFF	ON		
		150ms LO / 150ms HI								ON	ON		

★ Manufacture setting

◆ Note : (1) Default setting.

(2) Use 2nd and 3rd dip of the internal dip-switch to change different interface protocol.

(3) Remove the front cover and the dip-switch in on the CPU board.

(Please refer to "SW1" setting.)

TAO-A.V-ARS7(Pulse/ICT104V/ICT104U/MDB)

Interface Settings: 2(Pulse)

	INTERFACE	SW1	SW2	SW3	SW4
★	Credit-Pulse Normal HIGH	ON			
	Credit-Pulse Normal LOW	OFF			
★	Pulse Mode		ON	OFF	
	ICT104V Interface		OFF	ON	
	ICT104U Interface		OFF	OFF	
	MDB Interface		ON	ON	
★	Reserved				ON
					OFF

★ Manufacture setting

Interface Settings: 2(ICT104V)

	INTERFACE	SW1	SW2	SW3	SW4
	Reserved	ON			
★	Reserved	OFF			
	Pulse Mode		ON	OFF	
★	ICT104V Interface		OFF	ON	
	ICT104U Interface		OFF	OFF	
	MDB Interface		ON	ON	
★	Reserved				ON
					OFF

★ Manufacture setting

Currency Assign Data

Interface Bill value	ICT104U	ICT104V	Pulse	MDB
BV1	ARS 5	ARS 5	ARS 5	ARS 5
BV2	ARS 10	ARS 10	ARS 10	ARS 10
BV3	ARS 20	ARS 20	ARS 20	ARS 20
BV4	ARS 50	ARS 50	ARS 50	ARS 50
BV5	ARS 100	ARS 100	ARS 100	ARS 100
BV6	ARS 200	ARS 200	ARS 200	ARS 200
BV7	ARS 500	ARS 500	ARS 500	ARS 500

Interface Settings: 2(ICT104U)

	INTERFACE	SW1	SW2	SW3	SW4
	Reserved	ON			
★	Reserved	OFF			
	Pulse Mode		ON	OFF	
★	ICT104V Interface		OFF	ON	
	ICT104U Interface		OFF	OFF	
	MDB Interface		ON	ON	
★	Reserved				ON
					OFF

★ Manufacture setting

TAO-V-ARS7 Interface Settings: 2(MDB)

	FUNCTION	SW1	SW2	SW3	SW4
★	Scaling Factor (SF) = 100 Decimal Point Position (DPP) = 2	ON			
	Scaling Factor (SF) = 1 Decimal Point Position (DPP) = 0	OFF			
	Pulse Mode		ON	OFF	
	ICT104V Interface		OFF	ON	
	ICT104U Interface		OFF	OFF	
★	MDB Interface		ON	ON	
★	Reserved				ON
					OFF

★ Manufacture setting