

## XBA mini-TSR6

### XBA mini Option Switch Settings: 1(Pulse/MDB/JPSTD/ICT104U/ICT104V)

## Supported bill TSR 1, 5, 10, 25, 50, 100 6bills.

XBA mini dip-switch settings and functions:

FUNCTION	SW1	SW2	SW3	SW4	SW5	SW6	SW7	SW8	SW1	SW2	SW3	SW4
★ Reject TSR 1 & 5	ON											
★ Accept TSR 1 & 5	OFF											
★ Reject TSR 10		ON										
★ Accept TSR 10		OFF										
★ Reject TSR 25			ON									
★ Accept TSR 25			OFF									
★ Reject TSR 50				ON								
★ Accept TSR 50				OFF								
★ Reject TSR 100					ON							
★ Accept TSR 100					OFF							
★ Disable Bill Reject 4 Times BA Stop By 30 Sec						ON						
★ Enable Bill Reject 4 Times BA Stop By 30 Sec						OFF						
★ Stack Banknote when Power-up							ON					
★ Reject Banknote when Power-up							OFF					
★ Reserved								ON				
★ Reserved								OFF				
★ Inhibit Active High									ON			
★ Inhibit Active Low									OFF			
★ Reserved										ON		
★ Reserved										OFF		
★ Interface Timing Conversion	50ms LO / 50ms HI										OFF	OFF
	60ms LO / 300ms HI										ON	OFF
	30ms LO / 50ms HI										OFF	ON
	150ms LO / 150ms HI										ON	ON

★ Manufacture setting

After setting dip switch of the credit pulses, you should reset the bill acceptor again.

Note : 1. Calibration card is needed.

## XBA mini-TSR6(Pulse/MDB/JPSTD/ICT104V/ICT104U)

### Interface Settings: 2(Pulse)

INTERFACE	SW1	SW2	SW3	SW4
★ Credit-Pulse Normal HIGH	ON			
Credit-Pulse Normal LOW	OFF			
★ Pulse Mode		ON		
★ Other Mode		OFF		
★ 1 pulse / TSR 1			OFF	OFF
2 pulses / TSR 1			OFF	ON
5 pulses / TSR 1			ON	OFF
10 pulses / TSR 1			ON	ON

★ Manufacture setting

### Interface Settings: 2(MDB)

FUNCTION	SW1	SW2	SW3	SW4
★ Scaling Factor (SF) = 100 Decimal Point Position (DPP) = 2	ON			
Scaling Factor (SF) = 1 Decimal Point Position (DPP) = 0	OFF			
★ Pulse Mode		ON		
★ Other Mode		OFF		
★ MDB Mode			OFF	OFF
JPSTD Mode			OFF	ON
ICT104U Mode			ON	OFF
ICT104V Mode			ON	ON

★ Manufacture setting

### Interface Settings: 2(Other)

FUNCTION	SW1	SW2	SW3	SW4
★ Reserved	ON			
★ Reserved	OFF			
Pulse Mode		ON		
★ Other Mode		OFF		
MDB Mode			OFF	OFF
JPSTD Mode			OFF	ON
ICT104U Mode			ON	OFF
ICT104V Mode			ON	ON

★ Manufacture setting

### Interface Settings: 2(ICT104V)

FUNCTION	SW1	SW2	SW3	SW4
★ Connect with coin changer	ON			
Connect with ICT JPSTD Converter board	OFF			
Pulse Mode		ON		
★ Other Mode		OFF		
MDB Mode			OFF	OFF
JPSTD Mode			OFF	ON
ICT104U Mode			ON	OFF
★ ICT104V Mode			ON	ON

★ Manufacture setting

## Currency Assign Data

Interface Bill value	Pulse	MDB	ICT104U	ICT104V	JPSTD
BV1	TSR 1	TSR 1	TSR 1	TSR 1	TSR 1
BV2	TSR 5	TSR 5	TSR 5	TSR 5	
BV3	TSR 10	TSR 10	TSR 10	TSR 10	
BV4	TSR 25	TSR 25	TSR 25	TSR 25	
BV5	TSR 50	TSR 50	TSR 50	TSR 50	
BV6	TSR 100	TSR 100	TSR 100	TSR 100	