


XBA-CUC7 Option Switch Settings

Supported bill CUC 1, 3, 5, 10, 20, 50, 100 7bills.

FUNCTION	SW1	SW2	SW3	SW4	SW5	SW6	SW7	SW8
★ Reject CUC 1 & 3	ON							
★ Accept CUC 1 & 3	OFF							
Reject CUC 5 & 10		ON						
★ Accept CUC 5 & 10		OFF						
Reject CUC 20			ON					
★ Accept CUC 20			OFF					
Reject CUC 50				ON				
★ Accept CUC 50				OFF				
Reject CUC 100					ON			
★ Accept CUC 100					OFF			
★ Disable Bill Reject 4 Times BA Stop By 30 Sec						ON		
★ Enable Bill Reject 4 Times BA Stop By 30 Sec						OFF		
★ Stack Banknote when Power-up							ON	
★ Reject Banknote when Power-up							OFF	
★ Reserved								ON
★ Reserved								OFF

This dip switch is located at the side of XBA.

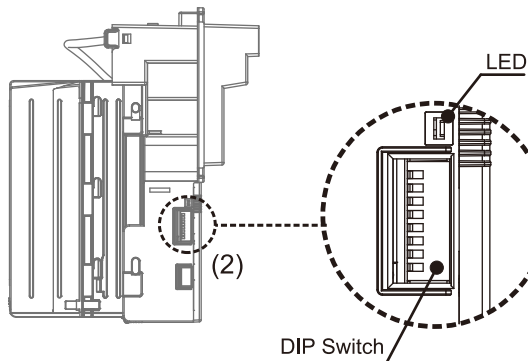


Currency Assign Data

Interface Bill value	ICT002U	ICT104U	ICT104V	Pulse	MDB
BV1	CUC 1	CUC 1	CUC 1	CUC 1	CUC 1
BV2	CUC 3	CUC 3	CUC 3	CUC 3	CUC 3
BV3	CUC 5	CUC 5	CUC 5	CUC 5	CUC 5
BV4	CUC 10	CUC 10	CUC 10	CUC 10	CUC 10
BV5	CUC 20	CUC 20	CUC 20	CUC 20	CUC 20
BV6	CUC 50	CUC 50	CUC 50	CUC 50	CUC 50
BV7	CUC 100	CUC 100	CUC 100	CUC 100	CUC 100

XBA-CUC7 (Pulse/MDB/ICT002U/ICT104U/ICT104V)

FUNCTION	SW1	SW2	SW3	SW4	SW5	SW6	SW7	SW8
Inhibit Active HIGH	ON							
★ Inhibit Active LOW	OFF							
★ Reserved		ON						
★ Reserved		OFF						
★ Reserved			ON					
★ Reserved			OFF					
★ Reserved				ON				
★ Reserved				OFF				
Pulse Mode	MDB Mode		ICT104V Mode					
★ Credit-Pulse Normal HIGH	Scaling Factor (SF) = 100 Decimal Point Position (DPP) = 2		Connect with coin changer		ON			
★ Credit-Pulse Normal LOW	Scaling Factor (SF) = 1 Decimal Point Position (DPP) = 0		Connect with ICT JPSTD converter board		OFF			
★ Pulse Mode						ON		
★ Other Mode						OFF		
Pulse Mode	Other Mode							
★ 1 pulse / CUC 1	MDB Mode						OFF	OFF
★ 5 pulses / CUC 1	ICT002U Mode						OFF	ON
★ 10 pulses / CUC 1	ICT104U Mode						ON	OFF
★ 20 pulses / CUC 1	ICT104V Mode						ON	ON

This dip switch is located on the CPU board, remove the CPU board cover first.

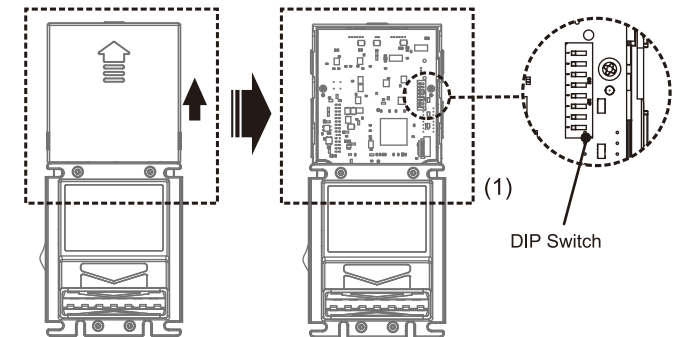

★ Manufacture setting

After setting dip switch of the credit pulses, you should reset the bill acceptor again.

Note : 1.Calibration card is needed.