

BS7-RUB7

BS7 Option Switch Settings: 1 (Pulse/MDB/ICT004)

Supported bill RUB 50, 100, 200, 500, 1000, 2000 7bills.

BS7 dip-switch settings and functions:

FUNCTION	SW1	SW2	SW3	SW4	SW5	SW6	SW7	SW8
★ Reject Ruble 50 & 100	ON							
★ Accept Ruble 50 & 100	OFF							
★ Reject Ruble 200		ON						
★ Accept Ruble 200		OFF						
★ Reject Ruble 500 & 1000			ON					
★ Accept Ruble 500 & 1000			OFF					
★ Reject Ruble 2000				ON				
★ Accept Ruble 2000				OFF				
★ Reject Ruble 5000					ON			
★ Accept Ruble 5000					OFF			
★ Reserved						ON		
★ Reserved						OFF		
★ Harness Disable							ON	
★ Harness Enable							OFF	
★ Inhibit Active High								ON
★ Inhibit Active Low								OFF

◆ Factory configuration has all switches in the OFF position.

BS7 Interface Settings: 2 (Pulse)

INTERFACE	SW1	SW2	SW3	SW4
★ 1 pulse / Rubles 50	OFF	OFF		
★ 2 pulse / Rubles 50	ON	OFF		
★ 5 pulse / Rubles 50	OFF	ON		
★ 10 pulse / Rubles 50	ON	ON		
★ 50ms LO / 50ms HI			OFF	OFF
★ 60ms LO / 300ms HI			ON	OFF
★ 30ms LO / 50ms HI			OFF	ON
★ 150ms LO / 150ms HI			ON	ON

★ Manufacture setting

BS7-RUB(Pulse/MDB/ICT004)

BS7 Interface Settings: 3 (ICT004)

INTERFACE	SW1	SW2	SW3	SW4
★ Reserved	ON			
★ Reserved	OFF			
★ Pulse Mode		ON	OFF	
★ MDB Interface		OFF	OFF	
★ ICT004 Interface		OFF	ON	
★ Reserved		ON	ON	
★ Reserved				ON
★ Reserved				OFF

★ Manufacture setting

BS7 Interface Settings: 3 (Pulse)

INTERFACE	SW1	SW2	SW3	SW4
★ Credit-Pulse Normal High	ON			
★ Credit-Pulse Normal Low	OFF			
★ Pulse Mode		ON	OFF	
★ MDB Interface		OFF	OFF	
★ ICT004 Interface		OFF	ON	
★ Reserved		OFF	ON	
★ Reserved				ON
★ Reserved				OFF

★ Manufacture setting

BS7 Interface Settings: 3 (MDB)

INTERFACE	SW1	SW2	SW3	SW4
★ Scaling Factor (SF) = 100 Decimal Point Position (DPP) = 2	ON			
Scaling Factor (SF) = 1 Decimal Point Position (DPP) = 0	OFF			
★ Pulse Mode		ON	OFF	
★ MDB Interface		OFF	OFF	
★ ICT004 Interface		OFF	ON	
★ Reserved		OFF	ON	
★ Reserved				ON
★ Reserved				OFF

★ Manufacture setting

Currency Assign Data

Interface Bill value	ICT004	Pulse	MDB
BV1	Ruble 50	Ruble 50	Ruble 50
BV2	Ruble 100	Ruble 100	Ruble 100
BV3	Ruble 500	Ruble 500	Ruble 500
BV4	Ruble 1000	Ruble 1000	Ruble 1000
BV5	Ruble 5000	Ruble 5000	Ruble 5000
BV6	Ruble 200	Ruble 200	Ruble 200
BV7	Ruble 2000	Ruble 2000	Ruble 2000

* Factory configuration has all switches in the OFF position.

Note:(1) Default setting

(2) Use 2nd and 3rd dip of the internal dip-switch to change different interface protocol.

(3) Remove the front cover and the dip-switch in on the CPU board.
(Please refer to "SW1" setting.)