


XBA-CRC4 Option Switch Settings

Supported bill CRC 1000, 2000, 5000, 10000 4bills.

	FUNCTION	SW1	SW2	SW3	SW4	SW5	SW6	SW7	SW8
★	Reject CRC 1000	ON							
★	Accept CRC 1000	OFF							
★	Reject CRC 2000								
★	Accept CRC 2000								
★	Reject CRC 5000		ON						
★	Accept CRC 5000		OFF						
★	Reject CRC 10000			ON					
★	Accept CRC 10000			OFF					
★	Reserved				ON				
★	Reserved				OFF				
★	Disable Bill Reject 4 Times BA Stop By 30 Sec					ON			
★	Enable Bill Reject 4 Times BA Stop By 30 Sec					OFF			
★	Stack Banknote when Power-up						ON		
★	Reject Banknote when Power-up						OFF		
★	ENABLE IrDA Download							ON	
★	Reserved							OFF	

This dip switch is located at the side of XBA.

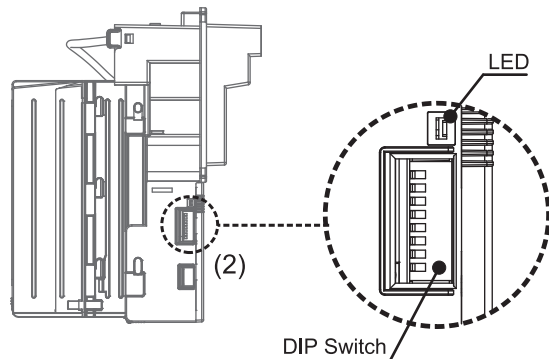


Currency Assign Data

Interface Bill value	ICT104U	Parallel A3	ICT104V	Pulse	MDB
BV1	CRC 1000	CRC 1000	CRC 1000	CRC 1000	CRC 1000
BV2	CRC 2000	CRC 2000	CRC 2000	CRC 2000	CRC 2000
BV3	CRC 5000	CRC 5000	CRC 5000	CRC 5000	CRC 5000
BV4	CRC 10000	CRC 10000	CRC 10000	CRC 10000	CRC 10000

XBA-CRC4 (Pulse/MDB/ICT104U/Parallel A3/ICT104V)

	FUNCTION	SW1	SW2	SW3	SW4	SW5	SW6	SW7	SW8
	Inhibit Active HIGH	ON							
★	Inhibit Active LOW	OFF							
	Reserved		ON						
★	Reserved		OFF						
	Reserved			ON					
★	Reserved			OFF					
	Reserved				ON				
★	Reserved				OFF				
	Pulse Mode	Other Mode							
★	Credit-Pulse Normal HIGH	★ SCALING_FACTOR 100 DECIMAL_PLACE_OFF 2							
	Credit-Pulse Normal LOW	SCALING_FACTOR 1 DECIMAL_PLACE_OFF 0				OFF			
★	Pulse Mode								
	Other Mode						OFF		
	Pulse Mode	Other Mode							
★	1 pulse / CRC 1K	MDB Mode						OFF	OFF
	2 pulses / CRC 1K	Parallel A3 Mode						OFF	ON
	10 pulses / CRC 1K	ICT104U Mode						ON	OFF
	20 pulses / CRC 1K	ICT104V Mode						ON	ON

This dip switch is located on the CPU board, remove the CPU board cover first.

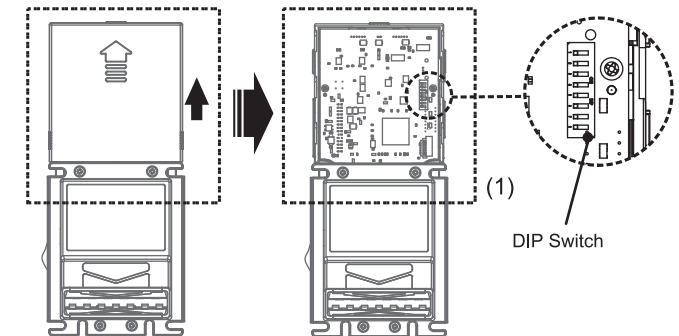

★ Manufacture setting

Note : 1. After setting dip switch of the credit pulses, you should reset the bill acceptor again.
2. Calibration card is needed.