


XBA-MAD4 Option Switch Settings

Supported bill MAD 20, 50, 100, 200 4bills.

	FUNCTION	SW1	SW2	SW3	SW4	SW5	SW6	SW7	SW8
★	Reject MAD 20	ON							
★	Accept MAD 20	OFF							
★	Reject MAD 50								
★	Accept MAD 50								
★	Reject MAD 100			ON					
★	Accept MAD 100			OFF					
★	Reject MAD 200								
★	Accept MAD 200								
★	Reserved				ON				
★	Reserved				OFF				
★	Disable Bill Reject 4 Times BA Stop By 30 Sec					ON			
★	Enable Bill Reject 4 Times BA Stop By 30 Sec					OFF			
★	Stack Banknote when Power-up							ON	
★	Reject Banknote when Power-up							OFF	
★	Reserved								
★	Reserved								

This dip switch is located at the side of XBA.

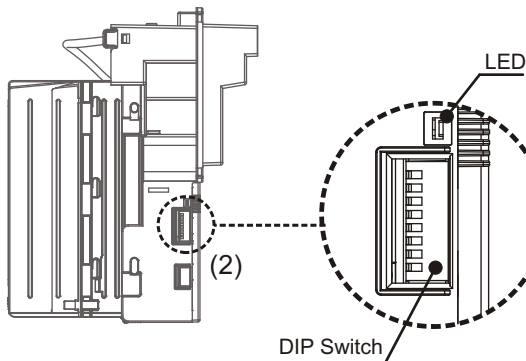


Currency Assign Data

Interface Bill value	ICT104U	GPT	ICT104V	Pulse	MDB
BV1	20	20	20	20	20
BV2	50	50	50	50	50
BV3	100	100	100	100	100
BV4	200	200	200	200	200

XBA-MAD4 (Pulse/MDB/ICT104U/GPT/ICT104V)

	FUNCTION	SW1	SW2	SW3	SW4	SW5	SW6	SW7	SW8	
★	Inhibit Active HIGH	ON								
	Inhibit Active LOW	OFF								
★	Reserved									ON
	Reserved									OFF
★	Reserved			ON						
	Reserved			OFF						
★	Reserved				ON					
	Reserved				OFF					
★	Pulse Mode	MDB Mode			ICT104V Mode					
	Credit-Pulse Normal HIGH	Scaling Factor (SF) = 100 Decimal Point Position (DPP) = 2			Connect with coin changer	ON				
	Credit-Pulse Normal LOW	Scaling Factor (SF) = 1 Decimal Point Position (DPP) = 0			Connect with ICT VCCS converter board	OFF				
★	Pulse Mode						ON			
	Other Mode						OFF			
★	Pulse Mode	Other Mode								
	1 pulse / MAD 10	MDB Mode						OFF	OFF	
	5 pulse / MAD 10	GPT Mode						OFF	ON	
	10 pulse / MAD 10	ICT104U Mode						ON	OFF	
	25 pulse / MAD 10	ICT104V Mode						ON	ON	

This dip switch is located on the CPU board, remove the CPU board cover first.

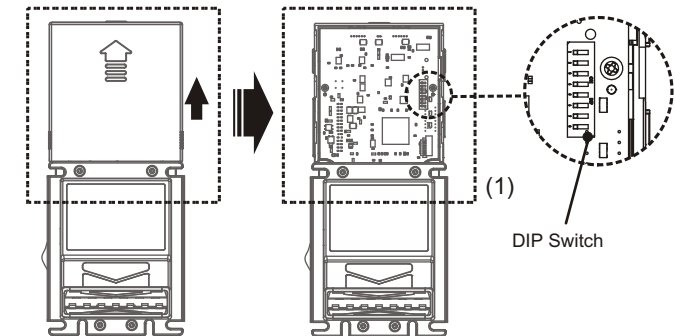

★ Manufacture setting

Note : 1. After setting dip switch of the credit pulses, you should reset the bill acceptor again.
2. calibrate card.