


XBA-NZD5 Option Switch Settings

Supported bill NZD 5, 10, 20, 50, 100 5bills.

	FUNCTION	SW1	SW2	SW3	SW4	SW5	SW6	SW7	SW8
★	Reject NZD 5	ON							
★	Accept NZD 5	OFF							
★	Reject NZD 10		ON						
★	Accept NZD 10		OFF						
★	Reject NZD 20			ON					
★	Accept NZD 20			OFF					
★	Reject NZD 50				ON				
★	Accept NZD 50				OFF				
★	Reject NZD 100					ON			
★	Accept NZD 100					OFF			
★	Disable Bill Reject 4 Times BA Stop By 30 Sec					ON			
★	Enable Bill Reject 4 Times BA Stop By 30 Sec					OFF			
★	Stack Banknote when Power-up						ON		
★	Reject Banknote when Power-up						OFF		
	Reserved							ON	
★	Reserved							OFF	

This dip switch is located at the side of XBA.

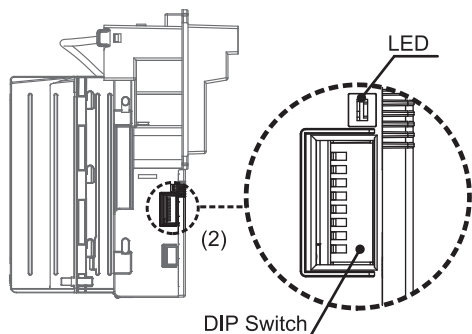

Currency Assign Data

Interface Bill value	Pulse	MDB	ICT104U	ICT104V	ICT002U
BV1	NZD 5	NZD 5	NZD 5	NZD 5	NZD 5
BV2	NZD 10	NZD 10	NZD 10	NZD 10	NZD 10
BV3	NZD 20	NZD 20	NZD 20	NZD 20	NZD 20
BV4	NZD 50	NZD 50	NZD 50	NZD 50	NZD 50
BV5	NZD 100	NZD 100	NZD 100	NZD 100	NZD 100

XBA-NZD5 (Pulse/MDB/ICT002U/ICT104U/ICT104V)

	FUNCTION	SW1	SW2	SW3	SW4	SW5	SW6	SW7	SW8
★	Inhibit Active HIGH	ON							
	Inhibit Active LOW	OFF							
	Reserved		ON						
★	Reserved		OFF						
	Reserved			ON					
★	Reserved			OFF					
	Reserved				ON				
★	Reserved				OFF				
★	Pulse Mode	MDB Mode			ICT104V Mode				
	Credit-Pulse Normal HIGH	Scaling Factor (SF) = 100 Decimal Point Position (DPP) = 2			Connect with coin changer	ON			
	Credit-Pulse Normal LOW	Scaling Factor (SF) = 1 Decimal Point Position (DPP) = 0			Connect with ICT VCCS converter board	OFF			
		Pulse Mode					ON		
	Other Mode					OFF			
★	Pulse Mode	Other Mode							
	1 pulse / NZD 5	MDB Mode						OFF	OFF
	5 pulses / NZD 5	ICT002U Mode						OFF	ON
	10 pulses / NZD 5	ICT104U Mode						ON	OFF
	25 pulses / NZD 5	ICT104V Mode						ON	ON

★ Manufacture setting

After setting dip switch of the credit pulses, you should reset the bill acceptor again.

Note: 1. Calibration card is needed.

This dip switch is located on the CPU board, remove the CPU board cover first.

