


XBA-SGD4 Option Switch Settings

Supported bill \$ 2, 5, 10, 50 4bills.

	FUNCTION	SW1	SW2	SW3	SW4	SW5	SW6	SW7	SW8
	Reject \$ 2	ON							
★	Accept \$ 2	OFF							
	Reject \$ 5		ON						
★	Accept \$ 5		OFF						
	Reject \$ 10			ON					
★	Accept \$ 10			OFF					
	Reject \$ 50				ON				
★	Accept \$ 50				OFF				
	Reserved				ON				
★	Reserved				OFF				
	Disable Bill Reject 4 Times BA Stop By 30 Sec				ON				
★	Enable Bill Reject 4 Times BA Stop By 30 Sec				OFF				
	Stack Banknote when Power-up						ON		
★	Reject Banknote when Power-up						OFF		
	Reserved							ON	
★	Reserved							OFF	

This dip switch is located at the side of XBA.

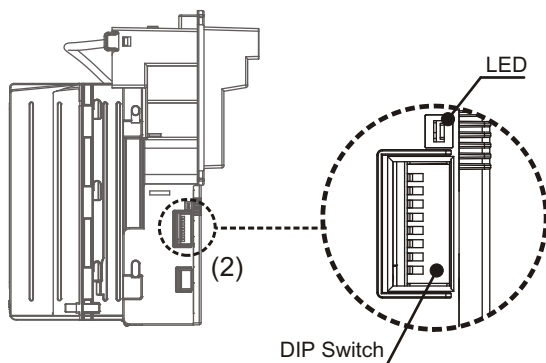


Currency Assign Data

Interface Bill value	ICT104U	Parallel A3	ICT104V	Pulse	MDB
BV1	SGD 2	SGD 2	SGD 2	SGD 2	SGD 2
BV2	SGD 5	SGD 5	SGD 5	SGD 5	SGD 5
BV3	SGD 10	SGD 10	SGD 10	SGD 10	SGD 10
BV4	SGD 50	SGD 50	SGD 50	SGD 50	SGD 50

XBA-SGD4 (Pulse/MDB/ICT104U/GPT/ICT104V)

	FUNCTION	SW1	SW2	SW3	SW4	SW5	SW6	SW7	SW8	
★	Inhibit Active HIGH	ON								
	Inhibit Active LOW	OFF								
★	Reserved									ON
	Reserved									OFF
★	Reserved			ON						
	Reserved			OFF						
★	Reserved									ON
	Reserved									OFF
★	Pulse Mode	MDB Mode			ICT104V Mode					
	Credit-Pulse Normal HIGH	Scaling Factor (SF) = 100 Decimal Point Position (DPP) = 2			Connect with coin changer	ON				
★	Credit-Pulse Normal LOW	Scaling Factor (SF) = 1 Decimal Point Position (DPP) = 0			Connect with ICT VCCS converter board	OFF				
	Pulse Mode						ON			
★	Other Mode						OFF			
	Pulse Mode	Other Mode								
★	1 pulse / SGD 1	MDB Mode						OFF	OFF	
	5 pulse / SGD 1	GPT Mode						OFF	ON	
	10 pulse / SGD 1	ICT104U Mode						ON	OFF	
	25 pulse / SGD 1	ICT104V Mode						ON	ON	

This dip switch is located on the CPU board, remove the CPU board cover first.

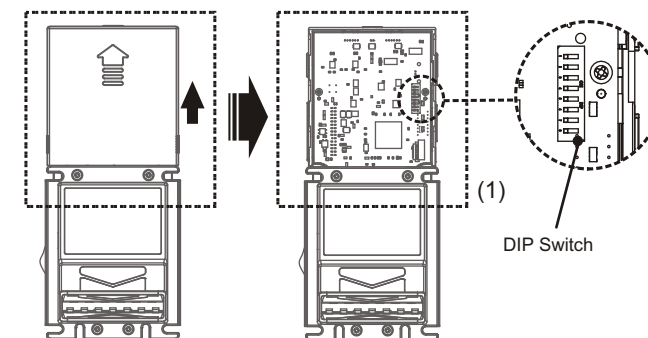

★ Manufacture setting

Note : 1. After setting dip switch of the credit pulses, you should reset the bill acceptor again.
2. calibrate card.