


XBA-SGD4 Option Switch Settings

Supported bill SGD 2, 5, 10, 50 4bills.

	FUNCTION	SW1	SW2	SW3	SW4	SW5	SW6	SW7	SW8
	Reject SGD 2	ON							
★	Accept SGD 2	OFF							
	Reject SGD 5		ON						
★	Accept SGD 5		OFF						
	Reject SGD 10			ON					
★	Accept SGD 10			OFF					
	Reject SGD 50				ON				
★	Accept SGD 50				OFF				
	Reserved				ON				
★	Reserved				OFF				
	Disable Bill Reject 4 Times BA Stop By 30 Sec				ON				
★	Enable Bill Reject 4 Times BA Stop By 30 Sec				OFF				
	Stack Banknote when Power-up						ON		
★	Reject Banknote when Power-up						OFF		
	Reserved							ON	
★	Reserved							OFF	

This dip switch is located at the side of XBA.

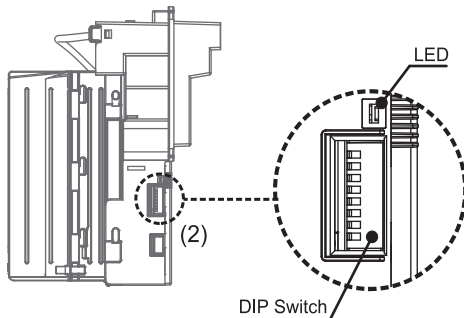


Currency Assign Data

Interface	ICT002U	ICT104U	ICT104V	Pulse	MDB
BV1	SGD 2	SGD 2	SGD 2	SGD 2	SGD 2
BV2	SGD 5	SGD 5	SGD 5	SGD 5	SGD 5
BV3	SGD 10	SGD 10	SGD 10	SGD 10	SGD 10
BV4	SGD 50	SGD 50	SGD 50	SGD 50	SGD 50

XBA-SGD4 (Pulse/MDB/ICT002U/ICT104U/ICT104V)

	FUNCTION	SW1	SW2	SW3	SW4	SW5	SW6	SW7	SW8
	Inhibit Active HIGH	ON							
★	Inhibit Active LOW	OFF							
	Reserved		ON						
★	Reserved		OFF						
	Reserved			ON					
★	Reserved			OFF					
	Reserved			ON					
★	Reserved			OFF					
	Pulse Mode							ON	
	Other Mode							OFF	
	Pulse Mode								
★	Credit-Pulse Normal HIGH					Connect with coin changer	ON		
	Credit-Pulse Normal LOW					Connect with ICT VCCS converter board	OFF		
★	Pulse Mode							ON	
	Other Mode							OFF	
	Pulse Mode								
★	1 pulse / SGD 1					MDB Mode		OFF	OFF
	5 pulses / SGD 1					ICT002U Mode		OFF	ON
	10 pulses / SGD 1					ICT104U Mode		ON	OFF
	25 pulses / SGD 1					ICT104V Mode		ON	ON

This dip switch is located on the CPU board, remove the CPU board cover first.

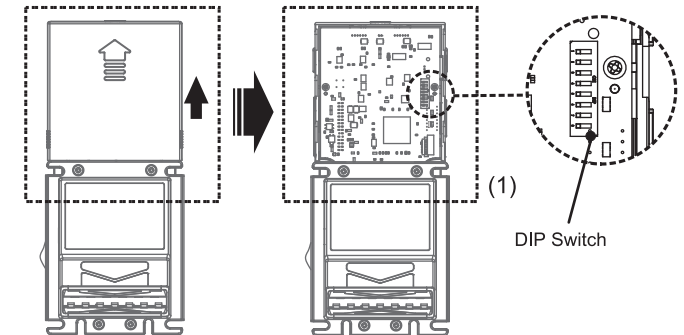

★ Manufacture setting

Note : 1. After setting dip switch of the credit pulses, you should reset the bill acceptor again.
2. Calibration card is needed.