


XBA-TRY6 Option Switch Settings

Supported bill Lira 5, 10, 20, 50, 100, 200 6bills.

	FUNCTION	SW1	SW2	SW3	SW4	SW5	SW6	SW7	SW8
★	Reject Lira 5	ON							
★	Accept Lira 5	OFF							
★	Reject Lira 10		ON						
★	Accept Lira 10		OFF						
★	Reject Lira 20			ON					
★	Accept Lira 20			OFF					
★	Reject Lira 50				ON				
★	Accept Lira 50				OFF				
★	Reject Lira 100 & 200				ON				
★	Accept Lira 100 & 200				OFF				
★	Disable Bill Reject 4 Times BA Stop By 30 Sec					ON			
★	Enable Bill Reject 4 Times BA Stop By 30 Sec					OFF			
★	Stack Banknote when Power-up							ON	
★	Reject Banknote when Power-up							OFF	
★	ENABLE IrDA Download								ON
★	Reserved								OFF

This dip switch is located at the side of XBA.

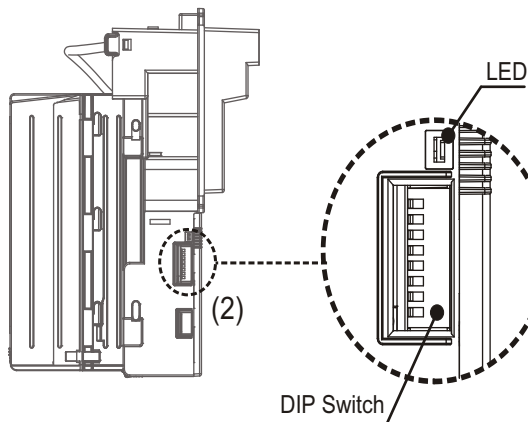


Currency Assign Data

Interface	ICT104U	Parallel A3	ICT104V	Pulse	MDB
Bill value					
BV1	Lira 5	Lira 5	Lira 5	Lira 5	Lira 5
BV2	Lira 10	Lira 10	Lira 10	Lira 10	Lira 10
BV3	Lira 20	Lira 20	Lira 20	Lira 20	Lira 20
BV4	Lira 50	Lira 50	Lira 50	Lira 50	Lira 50
BV5	Lira 100		Lira 100	Lira 100	Lira 100
BV6	Lira 200		Lira 200	Lira 200	Lira 200

XBA-TRY6 (Pulse/MDB/ICT/Parallel A3)

	FUNCTION	SW1	SW2	SW3	SW4	SW5	SW6	SW7	SW8
★	Inhibit Active HIGH	ON							
★	Inhibit Active LOW	OFF							
★	Reserved		ON						
★	Reserved		OFF						
★	Reserved			ON					
★	Reserved			OFF					
★	Reserved				ON				
★	Reserved				OFF				
★	Credit-Pulse Normal HIGH					ON			
★	Credit-Pulse Normal LOW					OFF			
★	Pulse Mode						ON		
★	Other Mode						OFF		
★	Pulse Mode	Other Mode							
	1 pulse / Lira 5	MDB Mode						OFF	OFF
	5 pulse / Lira 5	Parallel A3 Mode						OFF	ON
	10 pulse / Lira 5	ICT104U Mode						ON	OFF
	25 pulse / Lira 5	ICT104V Mode						ON	ON

This dip switch is located on the CPU board, remove the CPU board cover first.

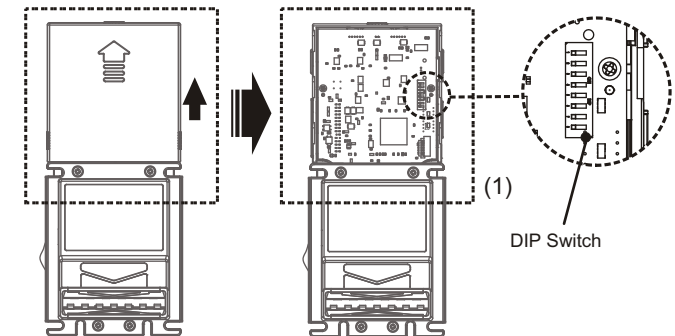

★ Manufacture setting

Note : 1.After setting dip switch of the credit pulses, you should rreset the bill acceptor again.
2.Calibrate card.