


XBA-AED6 Option Switch Settings

Supported bill AED 5, 10, 20, 50, 100, 200 6bills.

FUNCTION	SW1	SW2	SW3	SW4	SW5	SW6	SW7	SW8
★ Reject AED 5 & 10	ON							
★ Accept AED 5 & 10	OFF							
★ Reject AED 20		ON						
★ Accept AED 20		OFF						
★ Reject AED 50			ON					
★ Accept AED 50			OFF					
★ Reject AED 100				ON				
★ Accept AED 100				OFF				
★ Reject AED 200					ON			
★ Accept AED 200					OFF			
★ Disable Bill Reject 4 Times BA Stop By 30 Sec						ON		
★ Enable Bill Reject 4 Times BA Stop By 30 Sec						OFF		
★ Stack Banknote when Power-up							ON	
★ Reject Banknote when Power-up							OFF	
★ Reserved								ON
★ Reserved								OFF

This dip switch is located at the side of XBA.

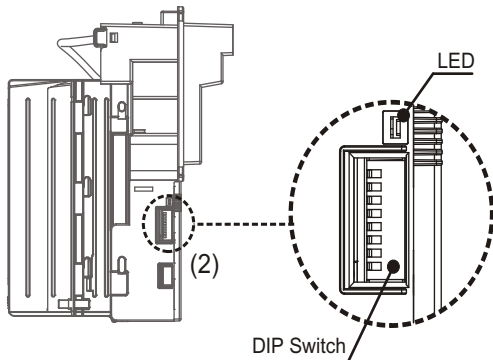


Currency Assign Data

Interface Bill value	ICT104U	GPT	ICT104V	Pulse	MDB
BV1	AED 5	AED 5	AED 5	AED 5	AED 5
BV2	AED 10	AED 10	AED 10	AED 10	AED 10
BV3	AED 20	AED 20	AED 20	AED 20	AED 20
BV4	AED 50	AED 50	AED 50	AED 50	AED 50
BV5	AED 100		AED 100	AED 100	AED 100
BV6	AED 200		AED 200	AED 200	AED 200

XBA-AED6 (Pulse/MDB/ICT104U/GPT/ICT104V)

FUNCTION	SW1	SW2	SW3	SW4	SW5	SW6	SW7	SW8	
Inhibit Active HIGH	ON								
★ Inhibit Active LOW	OFF								
★ Reserved		ON							
★ Reserved		OFF							
★ Reserved			ON						
★ Reserved			OFF						
★ Reserved				ON					
★ Reserved				OFF					
	Pulse Mode		MDB Mode		ICT104V Mode				
★ Credit-Pulse Normal HIGH	Scaling Factor (SF) = 100 Decimal Point Position (DPP) = 2		Connect with coin changer		ON				
★ Credit-Pulse Normal LOW	Scaling Factor (SF) = 1 Decimal Point Position (DPP) = 0		Connect with ICT VCCS converter board		OFF				
★ Pulse Mode						ON			
★ Other Mode						OFF			
	Pulse Mode		Other Mode						
★ 1 pulse / AED 5			MDB Mode					OFF	OFF
★ 2 pulse / AED 5			GPT Mode					OFF	ON
★ 4 pulse / AED 5			ICT104U Mode					ON	OFF
★ 20 pulse / AED 5			ICT104V Mode					ON	ON

This dip switch is located on the CPU board, remove the CPU board cover first.

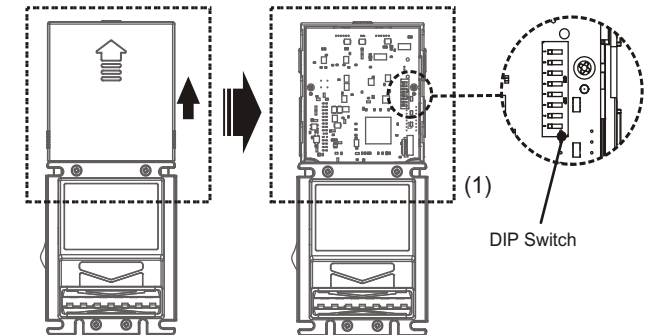

★ Manufacture setting

Note : 1. After setting dip switch of the credit pulses, you should reset the bill acceptor again.
2. Calibration card is needed.