


# XBA-MAD4 Option Switch Settings

Supported bill MAD 20, 50, 100, 200 4bills.

FUNCTION	SW1	SW2	SW3	SW4	SW5	SW6	SW7	SW8
★ Reject MAD 20	ON							
★ Accept MAD 20	OFF							
Reject MAD 50		ON						
★ Accept MAD 50		OFF						
Reject MAD 100			ON					
★ Accept MAD 100			OFF					
Reject MAD 200				ON				
★ Accept MAD 200				OFF				
Reserved					ON			
★ Reserved					OFF			
Disable Bill Reject 4 Times BA Stop By 30 Sec						ON		
★ Enable Bill Reject 4 Times BA Stop By 30 Sec						OFF		
Stack Banknote when Power-up							ON	
★ Reject Banknote when Power-up							OFF	
Reserved								ON
★ Reserved								OFF

This dip switch is located at the side of XBA.

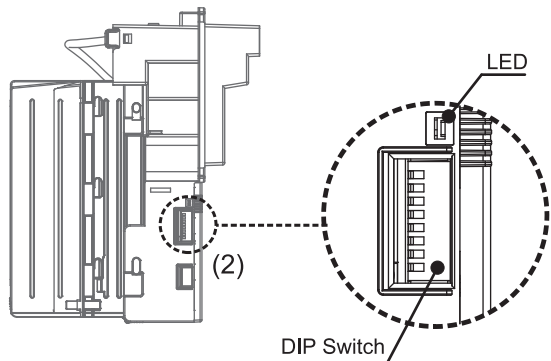


## Currency Assign Data

Interface Bill value	ICT104U	ICT104V	Pulse	MDB
BV1	MAD 20	MAD 20	MAD 20	MAD 20
BV2	MAD 50	MAD 50	MAD 50	MAD 50
BV3	MAD 100	MAD 100	MAD 100	MAD 100
BV4	MAD 200	MAD 200	MAD 200	MAD 200

# XBA-MAD4 (Pulse/MDB/ICT104U/ICT104V)

FUNCTION	SW1	SW2	SW3	SW4	SW5	SW6	SW7	SW8
Inhibit Active HIGH	ON							
★ Inhibit Active LOW	OFF							
Reserved		ON						
★ Reserved		OFF						
Reserved			ON					
★ Reserved			OFF					
Reserved				ON				
★ Reserved				OFF				
<b>Pulse Mode</b>	<b>MDB Mode</b>		<b>ICT104V Mode</b>					
★ Credit-Pulse Normal HIGH	Scaling Factor (SF) = 100 Decimal Point Position (DPP) = 2		Connect with coin changer		ON			
Credit-Pulse Normal LOW	Scaling Factor (SF) = 1 Decimal Point Position (DPP) = 0		Connect with ICT VCCS converter board		OFF			
★ Pulse Mode						ON		
Other Mode						OFF		
<b>Pulse Mode</b>	<b>Other Mode</b>							
★ 1 pulse / MAD 10	MDB Mode						OFF	OFF
5 pulses / MAD 10	Reserved						OFF	ON
10 pulses / MAD 10	ICT104U Mode						ON	OFF
25 pulses / MAD 10	ICT104V Mode						ON	ON

This dip switch is located on the CPU board, remove the CPU board cover first.

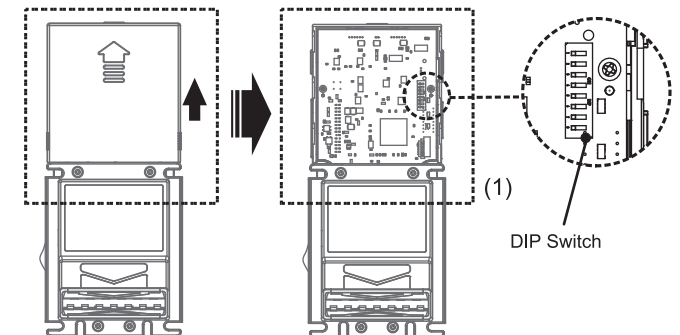

### ★ Manufacture setting

- Note :
1. Please reset the bill acceptor after set the dip switch.
  2. Dip switches 1 to 5 are only used for pulse protocol.
  3. Calibration card is needed.