


# XBA-RON5 Option Switch Settings

## Supported bill RON 1, 5, 10, 20, 50 5bills.

FUNCTION	SW1	SW2	SW3	SW4	SW5	SW6	SW7	SW8
★ Reject RON 1	ON							
★ Accept RON 1	OFF							
★ Reject RON 5		ON						
★ Accept RON 5		OFF						
★ Reject RON 10			ON					
★ Accept RON 10			OFF					
★ Reject RON 20				ON				
★ Accept RON 20				OFF				
★ Reject RON 50					ON			
★ Accept RON 50					OFF			
★ Disable Bill Reject 4 Times BA Stop By 30 Sec						ON		
★ Enable Bill Reject 4 Times BA Stop By 30 Sec						OFF		
★ Stack Banknote when Power-up							ON	
★ Reject Banknote when Power-up							OFF	
★ Test Mode (Pulse only)								ON
★ Operation Mode								OFF

This dip switch is located at the side of XBA.

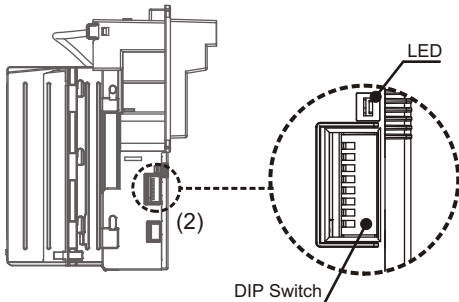


### Currency Assign Data

Interface Bill value	ICT104U	GPT	ICT104V	Pulse	MDB
BV1	RON 1	RON 1	RON 1	RON 1	RON 1
BV2	RON 5	RON 5	RON 5	RON 5	RON 5
BV3	RON 10	RON 10	RON 10	RON 10	RON 10
BV4	RON 50	RON 50	RON 50	RON 50	RON 50
BV5	RON 20		RON 20	RON 20	RON 20

# XBA-RON5 (Pulse/MDB/ICT104U/GPT/ICT104V)

FUNCTION	SW1	SW2	SW3	SW4	SW5	SW6	SW7	SW8
★ Inhibit Active HIGH	ON							
★ Inhibit Active LOW	OFF							
★ Reserved		ON						
★ Reserved		OFF						
★ 50ms LO / 50ms HI			OFF	OFF				
★ 50ms LO / 100ms HI			OFF	ON				
★ 65ms LO / 75ms HI			ON	OFF				
★ 100ms LO / 150ms HI			ON	ON				
	<b>Pulse Mode</b>		<b>MDB Mode</b>		<b>ICT104V Mode</b>			
★ Credit-Pulse Normal HIGH	Scaling Factor (SF) = 100 Decimal Point Position (DPP) = 2		Connect with coin changer		ON			
★ Credit-Pulse Normal LOW	Scaling Factor (SF) = 1 Decimal Point Position (DPP) = 0		Connect with ICT VCCS converter board		OFF			
★ Pulse Mode						ON		
★ Other Mode						OFF		
	<b>Pulse Mode</b>		<b>Other Mode</b>					
★ 1 pulse / RON 1	MDB Mode						OFF	OFF
★ 2 pulse / RON 1	GPT Mode						OFF	ON
★ 10 pulse / RON 1	ICT104U Mode						ON	OFF
★ 20 pulse / RON 1	ICT104V Mode						ON	ON

This dip switch is located on the CPU board, remove the CPU board cover first.

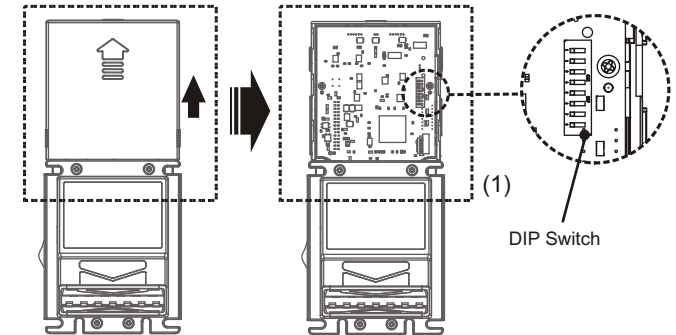

★ Manufacture setting

Note : 1. After setting dip switch of the credit pulses, you should reset the bill acceptor again.  
2. Calibration card is needed.