

XBA-CEK8(CZK4+EUR4) Option Switch Settings


Supported bill CZK 100, 200, 500, 1000 4bills
 € 5, 10, 20, 50 4bills.

FUNCTION	SW1	SW2	SW3	SW4	SW5	SW6	SW7	SW8
★ Reject CZK 100 & 200	ON							
★ Accept CZK 100 & 200	OFF							
★ Reject CZK 500 & 1000		ON						
★ Accept CZK 500 & 1000		OFF						
★ Reject € 5 & 10			ON					
★ Accept € 5 & 10			OFF					
★ Reject € 20 & 50				ON				
★ Accept € 20 & 50				OFF				
★ Reject € 5(2002) & 10(2002)					ON			
★ Accept Normal					OFF			
★ Disable Bill Reject 4 Times BA Stop By 30 Sec						ON		
★ Enable Bill Reject 4 Times BA Stop By 30 Sec						OFF		
★ Stack Banknote when Power-up							ON	
★ Reject Banknote when Power-up							OFF	
★ Reserved								ON
★ Reserved								OFF

★ Manufacture setting

Note: After setting dip switch of the credit pulses, you should reset the bill acceptor again.

This dip switch is located at the side of XBA.

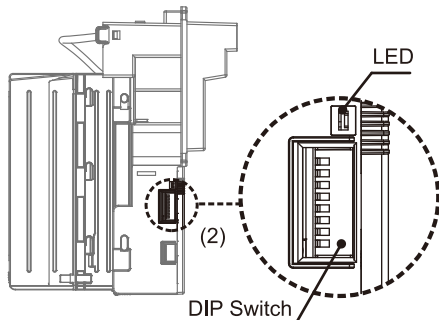

Currency Assign Data

Interface	ICT004U	ICT104V	Pulse	MDB
BV1	CZK 100	CZK 100	CZK 100	CZK 100
BV2	CZK 200	CZK 200	CZK 200	CZK 200
BV3	CZK 500	CZK 500	CZK 500	CZK 500
BV4	CZK 1000	CZK 1000	CZK 1000	CZK 1000
BV5	€ 5	€ 5	€ 5	€ 5
BV6	€ 10	€ 10	€ 10	€ 10
BV7	€ 20	€ 20	€ 20	€ 20
BV8	€ 50	€ 50	€ 50	€ 50

XBA-CEK8(CZK4+EUR4) (Pulse/MDB/ICT104U/ICT104V)

FUNCTION	SW1	SW2	SW3	SW4	SW5	SW6	SW7	SW8
Inhibit Active HIGH	ON							
★ Inhibit Active LOW	OFF							
★ Reserved		ON						
★ Reserved		OFF						
★ Reserved			ON					
★ Reserved			OFF					
★ Reserved				ON				
★ Reserved				OFF				
Pulse Mode		MDB Mode		ICT104V Mode				
★ Credit-Pulse Normal HIGH	Scaling Factor (SF) = 100 Decimal Point Position (DPP) = 2		Connect with coin changer		ON			
★ Credit-Pulse Normal LOW	Scaling Factor (SF) = 1 Decimal Point Position (DPP) = 0		Connect with ICT JPSTD converter board		OFF			
★ Pulse Mode					ON			
★ Other Mode					OFF			
Pulse Mode		Other Mode						
★ 1 pulse / € 5	MDB Mode					OFF	OFF	
5 pulses / € 5	Reserved					OFF	ON	
10 pulses / € 5	ICT104U Mode					ON	OFF	
25 pulses / € 5	ICT104V Mode					ON	ON	

★ Manufacture setting

Note: 1. Please reset the bill acceptor after setting the dip switch.
 2. Calibration card is needed.

This dip switch is located on the CPU board, remove the CPU board cover first.

