


# XBA-CRC4 Option Switch Settings

Supported bill CRC 1000, 2000, 5000, 10000 4bills.

FUNCTION	SW1	SW2	SW3	SW4	SW5	SW6	SW7	SW8
★ Reject CRC 1000	ON							
★ Accept CRC 1000	OFF							
Reject CRC 2000		ON						
★ Accept CRC 2000		OFF						
Reject CRC 5000			ON					
★ Accept CRC 5000			OFF					
Reject CRC 10000				ON				
★ Accept CRC 10000				OFF				
Reserved					ON			
★ Reserved					OFF			
Disable Bill Reject 4 Times BA Stop By 30 Sec						ON		
★ Enable Bill Reject 4 Times BA Stop By 30 Sec						OFF		
Stack Banknote when Power-up							ON	
★ Reject Banknote when Power-up							OFF	
Reserved								ON
★ Reserved								OFF

This dip switch is located at the side of XBA.

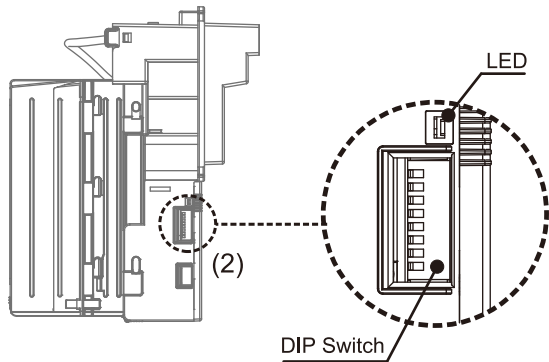

## Currency Assign Data


Interface Bill value	ICT104U	ICT104V	Pulse	MDB
BV1	CRC 1000	CRC 1000	CRC 1000	CRC 1000
BV2	CRC 2000	CRC 2000	CRC 2000	CRC 2000
BV3	CRC 5000	CRC 5000	CRC 5000	CRC 5000
BV4	CRC 10000	CRC 10000	CRC 10000	CRC 10000

Appendix

# XBA-CRC4 (Pulse/MDB/ICT104U/ICT104V)

FUNCTION	SW1	SW2	SW3	SW4	SW5	SW6	SW7	SW8
Inhibit Active HIGH	ON							
Inhibit Active LOW	OFF							
★ Reserved		ON						
★ Reserved		OFF						
Reserved			ON					
★ Reserved			OFF					
Reserved				ON				
★ Reserved				OFF				
<b>Pulse Mode</b>	<b>MDB Mode</b>		<b>ICT104V Mode</b>					
★ Credit-Pulse Normal HIGH	Scaling Factor (SF) = 100 Decimal Point Position (DPP) = 2		Connect with coin changer			ON		
Credit-Pulse Normal LOW	Scaling Factor (SF) = 1 Decimal Point Position (DPP) = 0		Connect with ICT JPSTD converter board			OFF		
★ Pulse Mode						ON		
Other Mode						OFF		
<b>Pulse Mode</b>	<b>Other Mode</b>							
★ 1 pulse / CRC 1k	MDB Mode						OFF	OFF
2 pulses / CRC 1k	Reserved						OFF	ON
10 pulses / CRC 1k	ICT104U Mode						ON	OFF
20 pulses / CRC 1k	ICT104V Mode						ON	ON

This dip switch is located on the CPU board, remove the CPU board cover first.

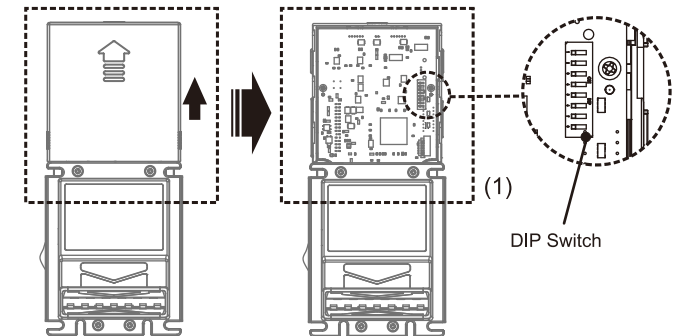

★ Manufacture setting

After setting dip switch of the credit pulses, you should reset the bill acceptor again.  
Note : 1. Calibration card is needed.