


# XBA-HRK5 Option Switch Settings

Supported bill HRK 10, 20, 50, 100, 200 5bills.

FUNCTION	SW1	SW2	SW3	SW4	SW5	SW6	SW7	SW8
★ Reject HRK 10	ON							
★ Accept HRK 10	OFF							
★ Reject HRK 20		ON						
★ Accept HRK 20		OFF						
★ Reject HRK 50			ON					
★ Accept HRK 50			OFF					
★ Reject HRK 100				ON				
★ Accept HRK 100				OFF				
★ Reject HRK 200					ON			
★ Accept HRK 200					OFF			
★ Disable Bill Reject 4 Times BA Stop By 30 Sec						ON		
★ Enable Bill Reject 4 Times BA Stop By 30 Sec						OFF		
★ Stack Banknote when Power-up							ON	
★ Reject Banknote when Power-up							OFF	
★ Reserved								ON
★ Reserved								OFF

This dip switch is located at the side of XBA.

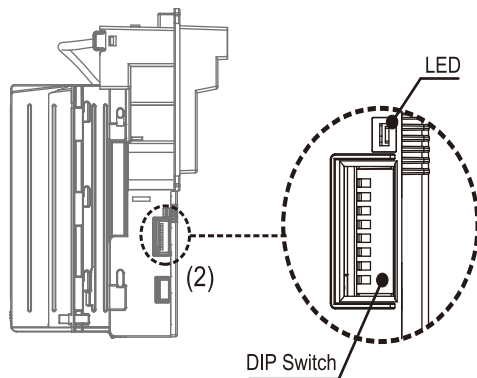


## Currency Assign Data

Interface Bill value	ICT104U	ICT104V	Pulse	MDB
BV1	HRK 10	HRK 10	HRK 10	HRK 10
BV2	HRK 20	HRK 20	HRK 20	HRK 20
BV3	HRK 50	HRK 50	HRK 50	HRK 50
BV4	HRK 100	HRK 100	HRK 100	HRK 100
BV5	HRK 200	HRK 200	HRK 200	HRK 200

# XBA-HRK5 (Pulse/MDB/ICT104U/ICT104V)

FUNCTION	SW1	SW2	SW3	SW4	SW5	SW6	SW7	SW8	
★ Inhibit Active HIGH	ON								
★ Inhibit Active LOW	OFF								
★ Reserved		ON							
★ Reserved		OFF							
★ Reserved			ON						
★ Reserved			OFF						
★ Reserved				ON					
★ Reserved				OFF					
	<b>Pulse Mode</b>		<b>MDB Mode</b>		<b>ICT104V Mode</b>				
★ Credit-Pulse Normal HIGH	Scaling Factor (SF) = 100 Decimal Point Position (DPP) = 2		Connect with coin changer		ON				
★ Credit-Pulse Normal LOW	Scaling Factor (SF) = 1 Decimal Point Position (DPP) = 0		Connect with ICT JPSTD converter board		OFF				
★ Pulse Mode					ON				
★ Other Mode					OFF				
	<b>Pulse Mode</b>		<b>Other Mode</b>						
★ 1 pulse / HRK 10			MDB Mode					OFF	OFF
★ 5 pulses / HRK 10			Reserved					OFF	ON
★ 10 pulses / HRK 10			ICT104U Mode					ON	OFF
★ 20 pulses / HRK 10			ICT104V Mode					ON	ON

This dip switch is located on the CPU board, remove the CPU board cover first.

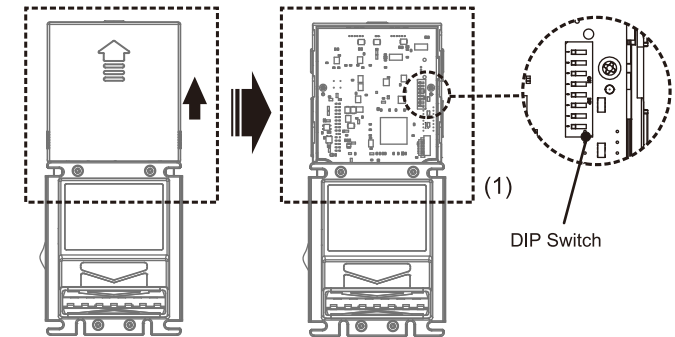

★ Manufacture setting

Note : 1.Please reset the bill acceptor after set the dip switch.  
2.Dip switches 1 to 5 are only used for pulse protocol.  
3.Calibration card is needed.