


XBA-HUF6 Option Switch Settings

Supported bill HUF 500, 1000, 2000, 5000, 10000, 20000 6bills.

FUNCTION	SW1	SW2	SW3	SW4	SW5	SW6	SW7	SW8
★ Reject HUF 500	ON							
★ Accept HUF 500	OFF							
★ Reject HUF 1000		ON						
★ Accept HUF 1000		OFF						
★ Reject HUF 2000			ON					
★ Accept HUF 2000			OFF					
★ Reject HUF 5000				ON				
★ Accept HUF 5000				OFF				
★ Reject HUF 10000 & 20000					ON			
★ Accept HUF 10000 & 20000					OFF			
★ Disable Bill Reject 4 Times BA Stop By 30 Sec						ON		
★ Enable Bill Reject 4 Times BA Stop By 30 Sec						OFF		
★ Stack Banknote when Power-up							ON	
★ Reject Banknote when Power-up							OFF	
★ Reserved								ON
★ Reserved								OFF

This dip switch is located at the side of XBA.

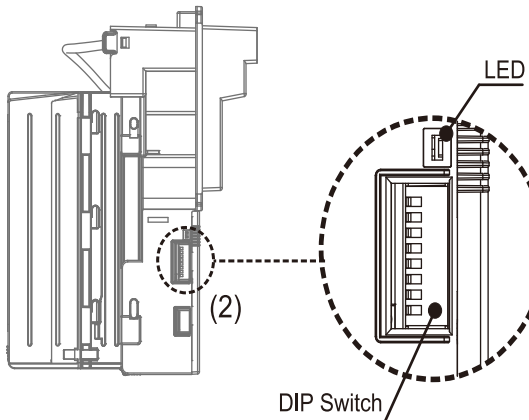


Currency Assign Data

Interface	ICT104U	ICT104V	Pulse	MDB
BV1	HUF 500	HUF 500	HUF 500	HUF 500
BV2	HUF 1000	HUF 1000	HUF 1000	HUF 1000
BV3	HUF 2000	HUF 2000	HUF 2000	HUF 2000
BV4	HUF 5000	HUF 5000	HUF 5000	HUF 5000
BV5	HUF 10000	HUF 10000	HUF 10000	HUF 10000
BV6	HUF 20000	HUF 20000	HUF 20000	HUF 20000

XBA-HUF6 (Pulse/MDB/ICT104U/ICT104V)

FUNCTION	SW1	SW2	SW3	SW4	SW5	SW6	SW7	SW8	
Inhibit Active HIGH	ON								
★ Inhibit Active LOW	OFF								
★ Reserved		ON							
★ Reserved		OFF							
★ Reserved			ON						
★ Reserved			OFF						
★ Reserved				ON					
★ Reserved				OFF					
	Pulse Mode		MDB Mode		ICT104V Mode				
★ Credit-Pulse Normal HIGH	Scaling Factor (SF) = 100 Decimal Point Position (DPP) = 2		Connect with coin changer		ON				
★ Credit-Pulse Normal LOW	Scaling Factor (SF) = 1 Decimal Point Position (DPP) = 0		Connect with ICT JPSTD converter board		OFF				
★ Pulse Mode						ON			
★ Other Mode						OFF			
	Pulse Mode		Other Mode						
★ 1 pulse / HUF 500			MDB Mode					OFF	OFF
★ 5 pulses / HUF 500			Reserved					OFF	ON
★ 10 pulses / HUF 500			ICT104U Mode					ON	OFF
★ 25 pulses / HUF 500			ICT104V Mode					ON	ON

This dip switch is located on the CPU board, remove the CPU board cover first.

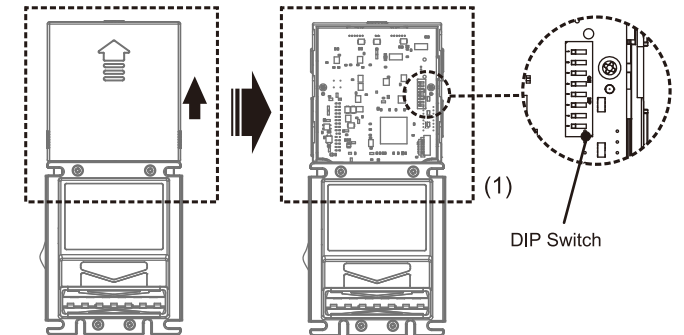

★ Manufacture setting

- Note :
- (1) Please reset the bill acceptor after set the dip switch.
 - (2) Dip switches 1 to 5 are only used for pulse protocol.
 - (3) Calibration card is needed.
 - (4) The transaction Record can be saved by USB MSD(only for EX series).