


XBA-ILS4 Option Switch Settings

Supported bill ILS 20, 50, 100, 200 4bills.

FUNCTION	SW1	SW2	SW3	SW4	SW5	SW6	SW7	SW8
★ Reject ILS 20	ON							
★ Accept ILS 20	OFF							
★ Reject ILS 50		ON						
★ Accept ILS 50		OFF						
★ Reject ILS 100			ON					
★ Accept ILS 100			OFF					
★ Reject ILS 200				ON				
★ Accept ILS 200				OFF				
★ Reserved					ON			
★ Reserved					OFF			
★ Disable Bill Reject 4 Times BA Stop By 30 Sec						ON		
★ Enable Bill Reject 4 Times BA Stop By 30 Sec						OFF		
★ Stack Banknote when Power-up							ON	
★ Reject Banknote when Power-up							OFF	
★ Reserved								ON
★ Reserved								OFF

This dip switch is located at the side of XBA.

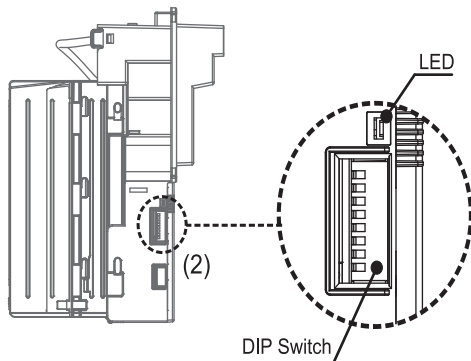

Currency Assign Data

Interface Bill value	ICT002U	ICT104U	ICT104V	Pulse	MDB
BV1	ILS 20	ILS 20	ILS 20	ILS 20	ILS 20
BV2	ILS 50	ILS 50	ILS 50	ILS 50	ILS 50
BV3	ILS 100	ILS 100	ILS 100	ILS 100	ILS 100
BV4	ILS 200	ILS 200	ILS 200	ILS 200	ILS 100

XBA-ILS4 (Pulse/MDB/ICT002U/ICT104U/ICT104V)

FUNCTION	SW1	SW2	SW3	SW4	SW5	SW6	SW7	SW8
Inhibit Active HIGH	ON							
★ Inhibit Active LOW	OFF							
★ Reserved		ON						
★ Reserved		OFF						
★ Reserved			ON					
★ Reserved			OFF					
★ Reserved				ON				
★ Reserved				OFF				
Pulse Mode	MDB Mode		ICT104V Mode					
★ Credit-Pulse Normal HIGH	Scaling Factor (SF) = 100 Decimal Point Position (DPP) = 2		Connect with coin changer		ON			
★ Credit-Pulse Normal LOW	Scaling Factor (SF) = 1 Decimal Point Position (DPP) = 0		Connect with ICT JPSTD converter board		OFF			
★ Pulse Mode						ON		
★ Other Mode						OFF		
Pulse Mode	Other Mode							
★ 1 pulse / ILS 10	MDB Mode						OFF	OFF
★ 2 pulses / ILS 10	ICT002U Mode						OFF	ON
★ 5 pulses / ILS 10	ICT104U Mode						ON	OFF
★ 10 pulses / ILS 10	ICT104V Mode						ON	ON

★ Manufacture setting

This dip switch is located on the CPU board, remove the CPU board cover first.

Note : (1) After setting dip switch of the credit pulses, you should reset the bill acceptor again.

(2) Please reset the bill acceptor after set the dip switch.

(3) Dip switches 1 to 5 are only used for pulse protocol.

(4) Calibration card is needed.

