


# XBA-JPY4 Option Switch Settings

Supported bill ¥ 1000, 2000, 5000, 10000 4bills.

FUNCTION	SW1	SW2	SW3	SW4	SW5	SW6	SW7	SW8
★ Reject ¥ 1000	ON							
★ Accept ¥ 1000	OFF							
★ Reject ¥ 2000		ON						
★ Accept ¥ 2000		OFF						
★ Reject ¥ 5000			ON					
★ Accept ¥ 5000			OFF					
★ Reject ¥ 10000				ON				
★ Accept ¥ 10000				OFF				
★ Accept only new JPY(2024)					ON			
★ Accept all JPY					OFF			
★ Disable Bill Reject 4 Times BA Stop By 30 Sec						ON		
★ Enable Bill Reject 4 Times BA Stop By 30 Sec						OFF		
★ Stack Banknote when Power-up							ON	
★ Reject Banknote when Power-up							OFF	
★ Reserved								ON
★ Reserved								OFF

This dip switch is located at the side of XBA.

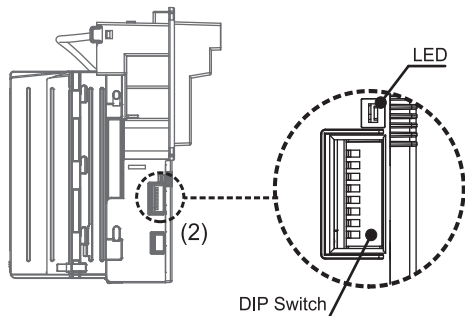


## Currency Assign Data

Interface Bill value	ICT002U	ICT104U	ICT104V	Pulse	MDB
BV1	¥ 1000	¥ 1000	¥ 1000	¥ 1000	¥ 1000
BV2	¥ 2000	¥ 2000	¥ 2000	¥ 2000	¥ 2000
BV3	¥ 5000	¥ 5000	¥ 5000	¥ 5000	¥ 5000
BV4	¥ 10000	¥ 10000	¥ 10000	¥ 10000	¥ 10000

# XBA-JPY4 (Pulse/MDB/ICT)

FUNCTION	SW1	SW2	SW3	SW4	SW5	SW6	SW7	SW8
★ Inhibit Active HIGH	ON							
★ Inhibit Active LOW	OFF							
★ Reserved		ON						
★ Reserved		OFF						
★ Reserved			ON					
★ Reserved			OFF					
★ Reserved				ON				
★ Reserved				OFF				
★ Pulse Mode	ICT104V Mode							
★ Credit-Pulse Normal HIGH	Connect with coin changer				ON			
★ Credit-Pulse Normal LOW	Connect with ICT JPSTD converter board				OFF			
★ Pulse Mode						ON		
★ Other Mode						OFF		
★ 1 pulse / ¥ 1000	MDB Mode						OFF	OFF
★ 5 pulses / ¥ 1000	ICT002U Mode						OFF	ON
★ 10 pulses / ¥ 1000	ICT104U Mode						ON	OFF
★ 25 pulses / ¥ 1000	ICT104V Mode						ON	ON

This dip switch is located on the CPU board, remove the CPU board cover first.

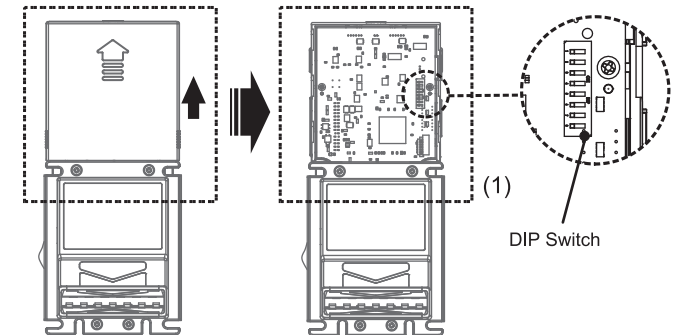

★ Manufacture setting

After setting dip switch of the credit pulses, you should reset the bill acceptor again.

Note : 1. Calibration card is needed

2. Scaling Factor (SF) = 1, Decimal Point Position (DPP) = 0