


XBA-LBP3

XBA Option Switch Settings(Pulse/MDB/ICT104U/ICT104V)

Supported bill LBP 1000, 5000, 10000 3bills.

FUNCTION	SW1	SW2	SW3	SW4	SW5	SW6	SW7	SW8
★ Reject LBP 1000	ON							
★ Accept LBP 1000	OFF							
★ Reject LBP 5000		ON						
★ Accept LBP 5000		OFF						
★ Reject LBP 10000			ON					
★ Accept LBP 10000			OFF					
★ Reserved				ON				
★ Reserved				OFF				
★ Reserved					ON			
★ Reserved					OFF			
★ Disable Bill Reject 4 Times BA Stop By 30 Sec						ON		
★ Enable Bill Reject 4 Times BA Stop By 30 Sec						OFF		
★ Stack Banknote when Power-up							ON	
★ Reject Banknote when Power-up							OFF	
★ Reserved								ON
★ Reserved								OFF

This dip switch is located at the side of XBA.

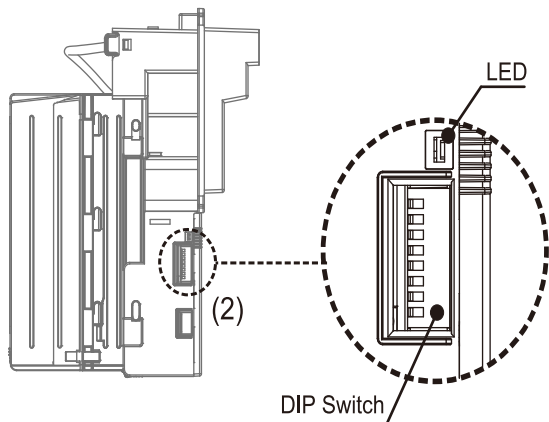


Currency Assign Data

Interface Bill value	ICT104U	ICT104V	Pulse	MDB
BV1	LBP 1000	LBP 1000	LBP 1000	LBP 1000
BV2	LBP 5000	LBP 5000	LBP 5000	LBP 5000
BV3	LBP 10000	LBP 10000	LBP 10000	LBP 10000

XBA-LBP3 (Pulse/MDB/ICT104U/ICT104V)

FUNCTION	SW1	SW2	SW3	SW4	SW5	SW6	SW7	SW8	
★ Inhibit Active HIGH	ON								
Inhibit Active LOW	OFF								
★ Reserved		ON							
★ Reserved		OFF							
★ Reserved			ON						
★ Reserved			OFF						
★ Reserved				ON					
★ Reserved				OFF					
	Pulse Mode		MDB Mode		ICT104V Mode				
★ Credit-Pulse Normal HIGH	Scaling Factor (SF) = 100 Decimal Point Position (DPP) = 2		Connect with coin changer		ON				
★ Credit-Pulse Normal LOW	Scaling Factor (SF) = 1 Decimal Point Position (DPP) = 0		Connect with ICT JPSTD converter board		OFF				
★ Pulse Mode						ON			
★ Other Mode						OFF			
	Pulse Mode		Other Mode						
★ 1 pulse / LBP 1000			MDB Mode					OFF	OFF
★ 5 pulses / LBP 1000			Reserved					OFF	ON
★ 10 pulses / LBP 1000			ICT104U Mode					ON	OFF
★ 20 pulses / LBP 1000			ICT104V Mode					ON	ON

This dip switch is located on the CPU board, remove the CPU board cover first.

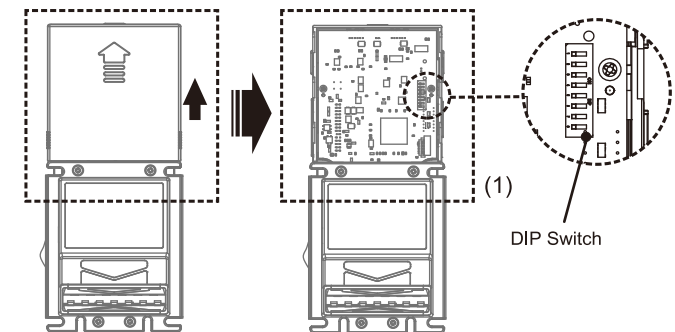

★ Manufacture setting

After setting dip switch of the credit pulses, you should reset the bill acceptor again.

Note : (1) Please reset the bill acceptor after set the dip switch.

(2) Dip switches 1 to 5 are only used for pulse protocol.

(3) Calibration card is needed.