

XBA-MMK6 Option Switch Settings

Supported bill MMK 100, 200, 500, 1000, 5000, 10000
6 bills.

FUNCTION	SW1	SW2	SW3	SW4	SW5	SW6	SW7	SW8
★ Reject MMK 100 & 200	ON							
★ Accept MMK 100 & 200	OFF							
★ Reject MMK 500 & 1000		ON						
★ Accept MMK 500 & 1000		OFF						
★ Reject MMK 5000			ON					
★ Accept MMK 5000			OFF					
★ Reject MMK 10000				ON				
★ Accept MMK 10000				OFF				
★ High Acceptance (Nota.3)					ON			
★ High Security					OFF			
★ Disable Bill Reject 4 Times BA Stop By 30 Sec						ON		
★ Enable Bill Reject 4 Times BA Stop By 30 Sec						OFF		
★ Stack Banknote when Power-up							ON	
★ Reject Banknote when Power-up							OFF	
★ Reserved								ON
★ Reserved								OFF


★ Manufacture setting

After setting dip switch of the credit pulses, you should reset the bill acceptor again.

Note : 1. Calibration card is needed.

2. The transaction Record can be saved by USB MSD(only for EX series)
3. High acceptance mode will increasing accepting rate, however, it will reduce the security level of Bill Acceptor.

This dip switch is located at the side of XBA.

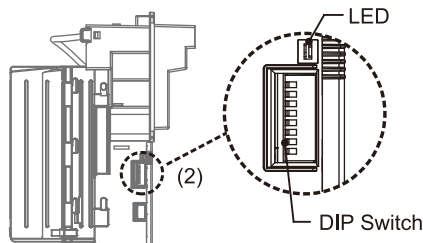


XBA-MMK6 (Pulse/MDB/EXRFID/ICT104U/ICT104V)

DIP Switch Settings:2

FUNCTION	SW1	SW2	SW3	SW4	SW5	SW6	SW7	SW8
★ Inhibit Active HIGH	ON							
★ Inhibit Active LOW	OFF							
★ Reserved		ON						
★ Reserved		OFF						
★ Reserved			ON					
★ Reserved			OFF					
★ Reserved				ON				
★ Reserved				OFF				
Pulse Mode	MDB Mode		ICT104V Mode		Other Mode			
★ Credit-Pulse Normal HIGH	Scaling Factor (SF) = 100 Decimal Point Position (DPP) = 2		Connect with coin change		Reserved	ON		
★ Credit-Pulse Normal LOW	Scaling Factor (SF) = 1 Decimal Point Position (DPP) = 0		Connect with ICT JPSTD converter board		Reserved	OFF		
★ Pulse Mode						ON		
★ Other Mode						OFF		
Pulse Mode	Other Mode							
★ 1 pulse / MMK 100	MDB Mode						OFF	OFF
2 pulses / MMK 100	EXRFID Mode						OFF	ON
5 pulses / MMK 100	ICT104U Mode						ON	OFF
20 pulses / MMK 100	ICT104V Mode						ON	ON

★ Manufacture setting

This dip switch is located on the CPU board, remove the CPU board cover first.

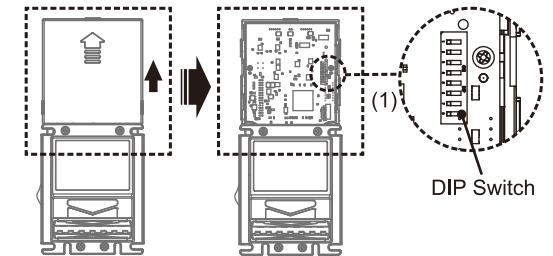

Currency Assign Data

Interface	EXRFID	ICT104U	ICT104V	Pulse	MDB
BV1		MMK 100	MMK 100	MMK 100	MMK 100
BV2	MMK 200	MMK 200	MMK 200	MMK 200	MMK 200
BV3	MMK 500	MMK 500	MMK 500	MMK 500	MMK 500
BV4	MMK 1000	MMK 1000	MMK 1000	MMK 1000	MMK 1000
BV5	MMK 5000	MMK 5000	MMK 5000	MMK 5000	MMK 5000
BV6	MMK 10000	MMK 10000	MMK 10000	MMK 10000	MMK 10000